


SERVICE GUIDE

For the latest parts information, please access to our service web site (http://www.e4buyer.com/refrigerator)

SIDE-BY-SIDE REFRIGERATOR

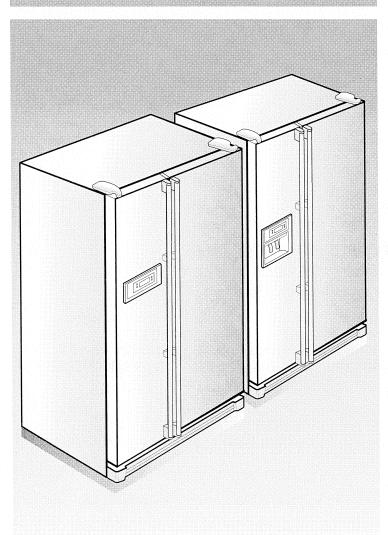

Model:

RS55 **

RS59**



IMPORTANT SAFETY NOTICE

The service guide is for service men with adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or dealer cannot be responsible for the interpretation of this information.

SAMSUNG ELECTRONICS

Technical Service Guide Copyright ©2004

All rights reserved. This service guide may not be reproduced in whole or in part in any form without written permission from the SAMSUNG ELECTRONICS Company.

Contents

1. SAFETY WARNINGS	5
2. INSTRUCTION	8
3. INSTALLATION	9
4. NOMENCLATURE	10
5. SPECIFICATIONS	11
6. INTERIOR VIEWS AND DIMENSIONS	14
7. FREEZING CYCLE AND COOL AIR CIRCULATION ROUTE	19
8. MECHANICAL DISASSEMBLY	21
9. OPERATION FUNCTION	29
10. CIRCUIT DESCRIPTION	43
11. DIAGNOSTICS	52
APPENDIX I (REFERENCE FOR CIRCUIT DIAGNOSTICS)	64
12. ILLUSTRATED PARTS CATALOGUE	72
13. MACHINE ROOM ASSEMBLY SPECIFICATION	97
14. DISASSEMBLY & ASSEMBLY METHOD INTERNAL PART OF ELECTRIC FIELD BOX	98

1. SAFETY WARNINGS

- Pull the power plug out already for the change or repair of electric parts.
- → Be careful the electric shock.
- When exchanging the parts, use the correct parts.
- → Check the model name, rating voltage, rating current, running temperature symbols.
- When troubleshooting, connect firmly the types of harness.
- → Make not to be separated when some power is imposed.
- Check the traces of water infiltration at the electric parts.
- → If there is a trace of water infiltration, exchange or tape the parts.
- Check the assemble status of parts after troubleshooting.
- → It should be done indiscriminately as before the repair.
- Check the use circumstance of refrigerator.
- → If the refrigerator is installed at the place that is damp or wet, or status of installation is unstable, change the installation place.
- Do earth in case of need.
- → Particularly, Be sure to earth when there is a risk of an electric leakage by humidity or wetness.
- Do not use multi plugs in a plug socket at the same time.
 Check the power cord and socket is damaged, pressed, squeezed, or fired.
- → If the plug or plug socket is damaged, repair or exchange that immediately.
- Do not store the foods unstable or bottles in the freezing room.
- Do not repair the refrigerator by user himself.
- Do not store another materials except the foods.
- → Drugs or scientific materials : difficult to keep a precise temperature.
- → The inflammables(alcohol, benzene, ether, LP gas, butane gas etc.): have a risk of explosion.

1. SAFETY WARNINGS

Read all instructions before repairing the product and keep to the instructions in order to prevent danger or property damage.

CAUTION/WARNING SYMBOLS DISPLAYED

Warning

Indicates that a danger of death or serious injury exists.



Caution

Indicates that a risk of personal injury or material damage exists.

SYMBOLS



means "Prohibition".



means "Do not disassemble".



means "No contact".



means "The things to be followed".



means "Power cord should be unplugged from the consent"



means "Earth to prevent Electric shock".




Warning & Caution

Pull the power plug out to exchange the interior lamp of the refrigerator.

• It may cause electric shock.



Unplug



On repair, remove completely dust or other things of housing parts, harness parts, and check parts.


• Cleaning may prevent the possible fire by tracking or short.





Use the rated components on the replacement.

• Check the correct model, rated voltage, rated current, operating temperature and so on.

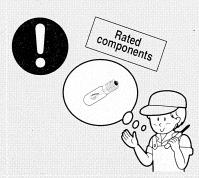

After repair, check the assembled state of components.

•It must be in the same assembled state when compared with the state before disassembly.



On repair, make sure that the wires such as harness are bundled tightly.

• Bundle tightly wires in order not to be detached by the external force and then not to be wetted.




Check if there is any trace indicating the permeation of water.

• If there is that kind of trace, change the related components or do the



necessary treatment such as taping using the insulating tape.



* Please ler users know following warnings & cautions in detail.



Warning & Caution

Do not allow users to put bottles or kinds of glass in the freezer.

• Freezing of the contents may inflict a wound.




Do not allow users to insert the power plugs for many products at the same time.

• May cause abnormal generation of heat or fire.



Prohibition



Do not allow users to store articles on the product.

• Opening or closing the door may cause things to fall down, with may inflict a wound.



Do not allow users to store narrow and lengthy bottles or foods in a small multi-purpose room.

• It may hurt you when refrigerator door is opened and closed resulting in falling stuff




Do not allow users to disassemble, repair or alter.

• It may cause fire or abnormal operation which leads to injury.



Do not allow users to install the refrigerator in the wet place or the place which water splashes.

• Deterioration of insulation of electric parts may cause electric shock or fire.

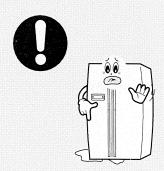


Do not allow users to store pharmaceutical products, scientific materials, etc., in the refrigerator.

• The products which temperature control should not be stored in the refrigerator.




Do not allow users to bend the power cord with excessive force or do not have the power cord pressed by heavy article.

• May cause fire.

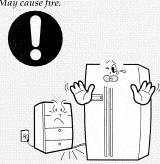

Make sure of the earth.

• If earthing is not done, it will cause breakdown and electric shock.

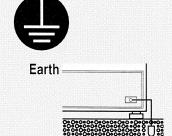

2. INSTRUCTION

SAMSUNG side by side refrigerator has the following characteristics.

Twin Cooling System

 The refrigerator and the freezer have two evapora

tors. Given this independent system, the freezer and the refrigerator are cooled individually as required and are, therefore, more efficient. Food odor from the refrigerator does not affect food in the freezer due to separate of air flow circulation.

Multi-Flow System

Cool air circulates through multiple vents on every

shelf level. This provides even distribution of cooling inside cabinets to keep your food fresh longer.

Door Alarm

• A beeper reminds you if the door is left open.

High humidity for fresher food

 You can keep food, fruit and vegetables fresh for longer because your refrigerator supplies highly humidified cold air. This can be up to four or five times more effective than a normal refrigerator.

Energy-saving fridge/freezer

 Power consumption is kept to a minimum by distributing cool air separately to the refrigerator and freezer.

Faster cooling times

• The power freeze function allow you to freeze food more quickly.

Abundant supply of ice and cold water

• The ice and water dispenser provides ice and cold water at any time.

Beverage Station (optional)


 You do not have to open the main door to access frequently used food in the extra refrigerating compartment. This saves time and money.

Deodorizer (optional)

 Reusable deodorizer keeps the refrigerator air fresh and odor free.

CoolSelect Zone™Drawer (optional)

 User can select Quick Cool, Thaw and Select buttons for quickly chill, thaw and cools items.
 Select Soft Freeze, Cool or Chill to control the temperature of drawer.

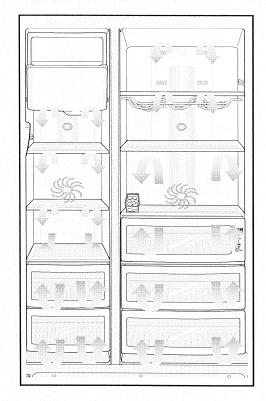



This operation instruction covers various models.

The characteristics of your appliance may differ slightly from those described in this manual.

3. INSTALLATION




- 1) To protect refrigerator in movement
 Use padded hand truck as shown. If entrance width is less than 30 ", remove doors prior to installation and reattach doors according to procedure below.
- 2) Remove all protective tape and pad in refrigerators. Please adjust the clearance between the doors.
- Set the temperature control to the temperature and wait for an hour.


The refrigerator should get slightly chilled and the motor runs smoothly.

4) Once the refrigerator temperature is sufficiently cool You can store food in the refrigerator. After starting the refrigerator, it takes a few hours to reach the appropriate temperature.

• Disassemble the refrigerator




- 1) With the door closed, disassemble screw(①) by using (+) screw driver and then disassemble the upper hinge cover(②).
- 2) Disassemble bolts (③) and screws (④) to the counter-clockwise by using a tool, and take off the upper hinge (⑤) along the arrow (⑥). Take care when you disassemble the door to ensure that it does not fall on you.




- 3) Disassemble the door from the lower hinge (⑦) by lifting the door (⑧).
- 4) Disassemble the lower hinge (③) from the bracket lower hinge (⑥) by lifting the lower hinge (⑤) in the direction of the arrow.

Assemble the refrigerator

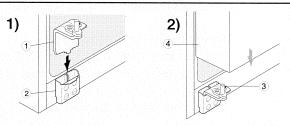


- 1) Insert the lower hinge (①) in the bracket lower hinge (②).
- 2) Assemble the door (4) in the lower hinge (3).

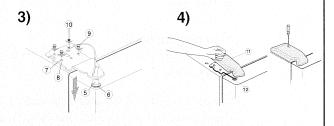


- 3) Insert the upper hinge shaft (⑤) into the hole (⑥). After leveling between the upper hinge hole (⑦) and the hole of the refrigerator (⑧), assemble bolts (⑨) and screws (⑩) to the clockwise by using a tool.
- 4) Put the front part of the upper hinge cover (①) on the front part of the upper hinge (②) and assemble, starting with the front part of the upper hinge cover. Assemble the screw to the clock wise by using a tool.

4. NOMENCLATURE

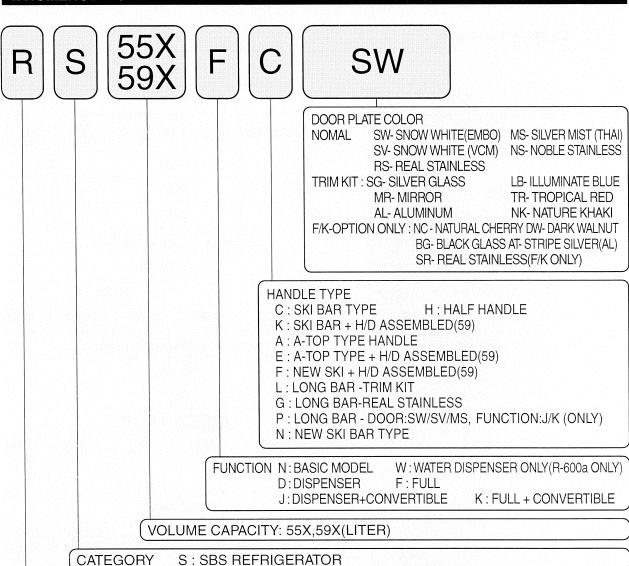

BRAND: R-SAMSUNG REFRIGERATOR

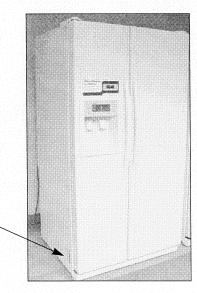

Label Location

5. SPECIFICATIONS

5-1. Model Specification

Item				Specif	ication		
Model(RS21)		Basic	Basic & H/B	Dispenser	Dispenser & H/B	Dispenser with CoolSelectZone™	Dispenser & H/B CoolSelectZone™
Total		557ℓ		532ℓ		520ℓ	
Net Capacity	Refrigerator	3	46l	34	ŀ6ℓ	334ℓ	
	Freezer	2116		186ℓ		186ℓ	
Net dimension(W×D×H)		908mm × 719mm × 1760mm					
Rated Frequency and Frequency		230 ~ 240V/50Hz					
Motor Rated C	onsumption Power	155W 160W					
Electric Heater Rated Consumption Power		401W	411W	413W	423W	413W	423W
Kind of Refrigerator		Indirect Cooling Method Refrigerator					
Ref	rigerant	R600a					
Refrigeran	t Input Amount	88g					
Freezer I	Performance	★ ♥★★ (4-STAR)					
Product Weight		111Kg	111Kg	117Kg	117Kg	120Kg	120Kg

I	tem			Specif	ication		
Model(RS23)		Basic	Basic & H/B	Dispenser	Dispenser & H/B	Dispenser with CoolSelectZone™	Dispenser & H/B CoolSelectZone™
Total		594ℓ		565ℓ		553 _ℓ	
Net Capacity	Refrigerator	369 <i>ℓ</i> 225 <i>ℓ</i>		369 <i>ℓ</i> 196 <i>ℓ</i>		357ℓ 196ℓ	
	Freezer						
Net dimension(W×D×H)		908mm × 754mm × 1760mm					
Rated Frequency and Frequency		230 ~ 240V/50Hz					
Motor Rated Consumption Power		155W 160W					
Electric Heater Rat	ted Consumption Power	401W	411W	413W	423W	413W	423W
Kind of Refrigerator		Indirect Cooling Method Refrigerator					
Refrigerant		R600a					
Refrigeran	t Input Amount	88g					
Freezer I	Performance	★ ☞★★ (4-STAR)					
Product Weight		121Kg	121Kg	127Kg	127Kg	130Kg	130Kg


5-2. Electric Parts Specification

		Items		Speci	fication
		Models			
		Freezing Ca	oacity	* ** *	(4 STAR)
Components for Freezer			Model	MK4	A5Q-RIU
	Compressor		Starting type	R.S.C.R	
			Oil Charge	FREOL α - 15 (ESTER)	
or F	F	vanorator	Freezer	SPLIT FIN TYPE	
nts t	Evaporator		Refrigerator	SPLIT FIN TYPE	
one		Condens	er	Forced and natu	ıral convection type
duc		Dryer		Moleculai	sieve XH-9
Ö	Capillary tube			0.82×3000	0, 5.5 Kg/cm ²
		Refrigera	ınt	Re	600a
ents		Model	Temperature Selection	ON(℃)	OFF(°C)
modu	Freezer	THERMISTOR (F-SENSOR) 502AT	-25℃	-24.0	-26.0
Room Temperature Sensor Components			-20 ℃	-19.0	-21.0
Sens			-14℃	-13.0	-15.0
ature	Refrigerator	Model	Temperature Selection	ON(°C)	OFF(℃)
npera		THERMISTOR (R-SENSOR) 502AT	1°C	2.0	-1.0
m Ter			3℃	4.0	2.0
B8	Re		7 °C	8.0	6.0
	cle	First Defrost Cycle (C	oncurrent defrost of F and R)	4 hr \pm 10 min	
nts	ost Cycle	Defrost	: Cycle(FRE)	12 ~ 24 hr (vary accord	ing to the conditions used)
one				6 ~ 12 hr (vary according to the conditions used	
duc	Defi	Pau	use time	10 \pm 2 min	
ŏ	Isor	F Defrost-	Model	THERMISTOR (502AT)	
late	Ser	Sensor	SPEC	5.0 ㎏ at 25°C	
t Re	efrost Sensor	R Defrost-	Model	THERMISTOR (502AT)	
Defrost Related Components	Def	Sensor	SPEC	5.0 №	at 25℃
De	TI	normal Fusa	Rated	AC 250V 10A	
	Thermal-Fuse		Operating temperature	77 (+0)°C/-5°C)

Items			Specifications		
	Mod	del	Basic	Dispenser	Home Bar
	Defrost-Heater(FRE)	Conducting at F Defrosting	215 W		
	Defrost-Heater(REF)	Conducting at R Defrosting	110 W		
	DRAIN Heater(FRE)	Conducting at F Defrosting	41 W		
	DRAIN Heater(REF)	Conducting at R Defrosting	35 W		
	DISPENSER Heater	Interlock with F-FAN	-	5W	5W
	HOME-BAR Heater	Interlock with COMP	-	-	10W
	WATER PIPE Heater		-	7W	-
	Thermal-Fuse for preventing overheating of Freezer Defrost-Heater		AC 25	50V 10A 77(+0℃	:/-5°C)
	Thermal-Fuse for preventing overheating of Refrigerator Defrost-Heater		AC 250V 10A 77 (+0°C/-5°C)		
	Condenser for COMP	Running	350VAC-5μF		
ıts	(Package type) Starting			
oner	Starting Poles	Model	J531Q35E330M385-2		
Electric Components	Starting-Relay	Operation	33 Ω ±20%		
S S		Model	4TM265RFBYY-53		
ctric	Over-load Rela	y Temp. ON	130 ±5°C		
H H H		Temp. OFF	61 ±9°C		
	Rate	d Voltage		230V/50,60Hz	
	MOTOR	-BLDC(FRE)	DC12V/DREP302 Ø CA		
	MOTOR	-BLDC(REF)	DC12V/DREP302 Ø CA		
	MOTOR-	BLDC (Circuit)	DC12V/DRCP302 ø LA		
	Lamp(FRE)		AC240V/30W		
	Lan	np(REF)	AC240V/30W×2		
	Door Switch		AC250V 0.5A×2		
		h (HOME-BAR)	AC250V 0.5A		
		wer cord	AC250V 12A		
		th Screw	BSBN (BRASS SCREW)		

6. INTERIOR VIEWS AND DIMENSIONS

6-1. The Name of Each Part(Basic)

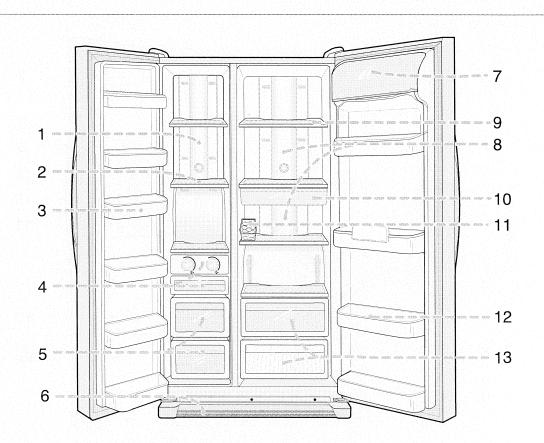


FREEZER

- ① LAMP-INCANDESCENT ⑦ COVER-GUARD
- ② SHELF
- 3 GUARD
- **⑤** CASE-BASKET
- **6** COVER-LEG, FRONT

- **8** LAMP-INCANDESCENT
- 9 SHELF
- ① TRAY-EGG
- 12 GUARD
- ③ CASE-VEGETABLE

6-2. Part Name (HOME BAR)

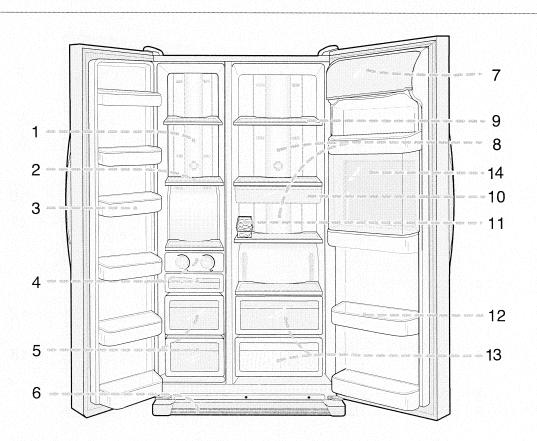


FREEZER

- ① LAMP-INCANDESCENT ⑦ COVER-GUARD
- ② SHELF
- ③ GUARD
- **(4)** TRAY-ICE & CASE ICE
- **⑤** CASE-BASKET
- **©** COVER-LEG, FRONT

- **8 LAMP-INCANDESCENT**
- 9 SHELF
- 10 TRAY-CHILLED ROOM
- ① TRAY-EGG
- 12 GUARD
- **13** CASE-VEGETABLE
- **14** HOME-BAR

6-3. Part Name (DISPENSER)

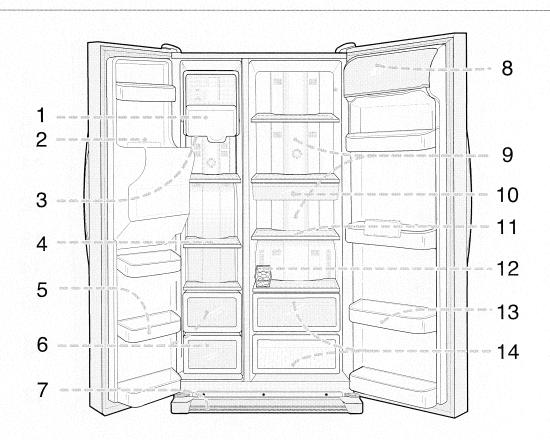


FREEZER

- ① ICE-MAKER
- ② ICE-CHUTE
- ③ LAMP-INCANDESCENT ⑩ TRAY-CHILLED ROOM
- 4 SHELF
- **⑤** GUARD
- CASE-BASKET
- ① COVER-LEG, FRONT

- **® COVER-GUARD**

- ① SHELF
- 12 TRAY-EGG
- **13 GUARD**
- **(4)** CASE-VEGETABLE

6-4. Part Name (DISPENSER / HOME BAR / CoolSelect Zone™)

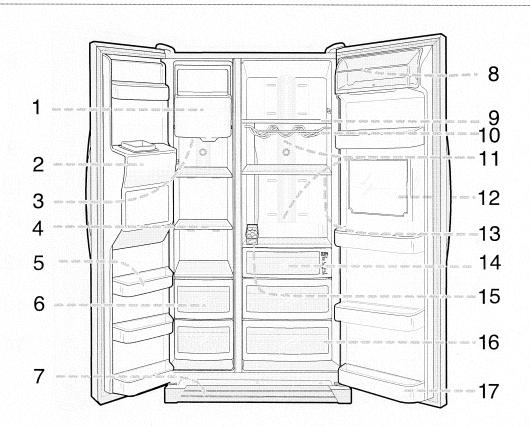


FREEZER

- ① ICE-MAKER
- ② ICE-CHUTE
- ③ LAMP
- 4 SHELF
- ⑤ GUARD
- **⑥** CASE-BASKET
- ⑦ COVER-LEG, FRONT


- **® COVER-GUARD**
- 9 SHELF
- **10** SHELF-WINE
- ① LAMP
- 12 HOME BAR
- **13** SHELF
- CoolSelect Zone™
- **15** TRAY EGG
- **16** CASE-VEGETABLE
- T GUARD

6-5. Dimensions of Unit

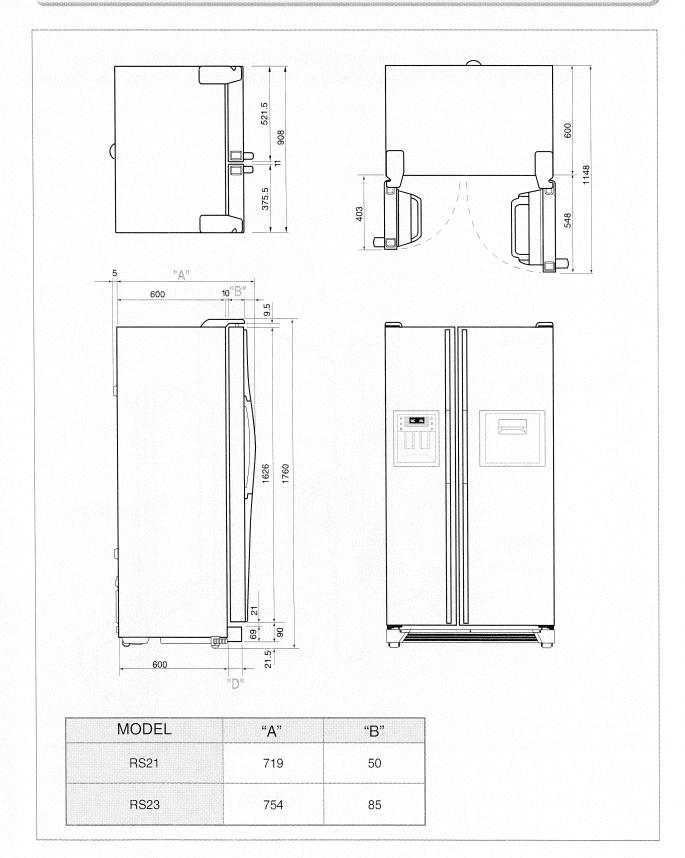


7. FREEZING CYCLE AND COOL AIR CIRCULATION ROUTE

7-1. Freezing Cycle

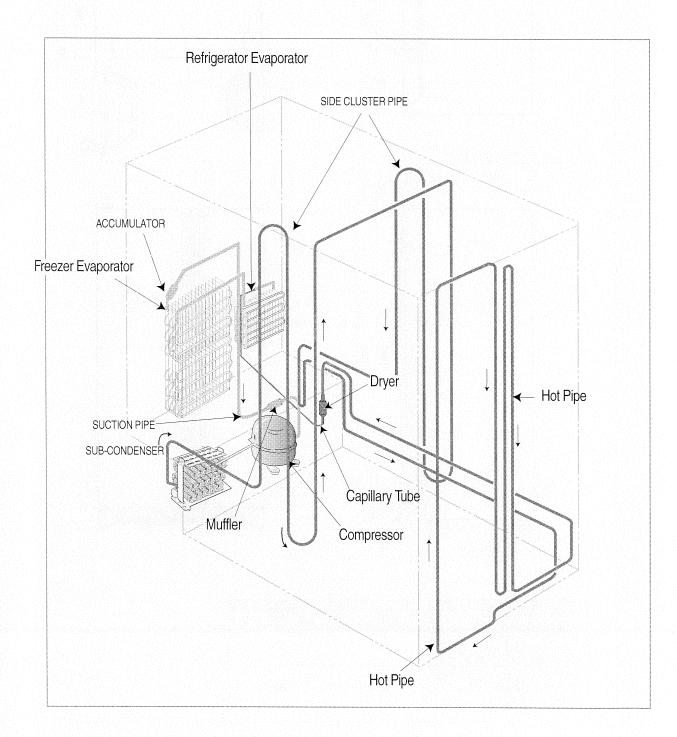

7-2. Cooling Air Circulation

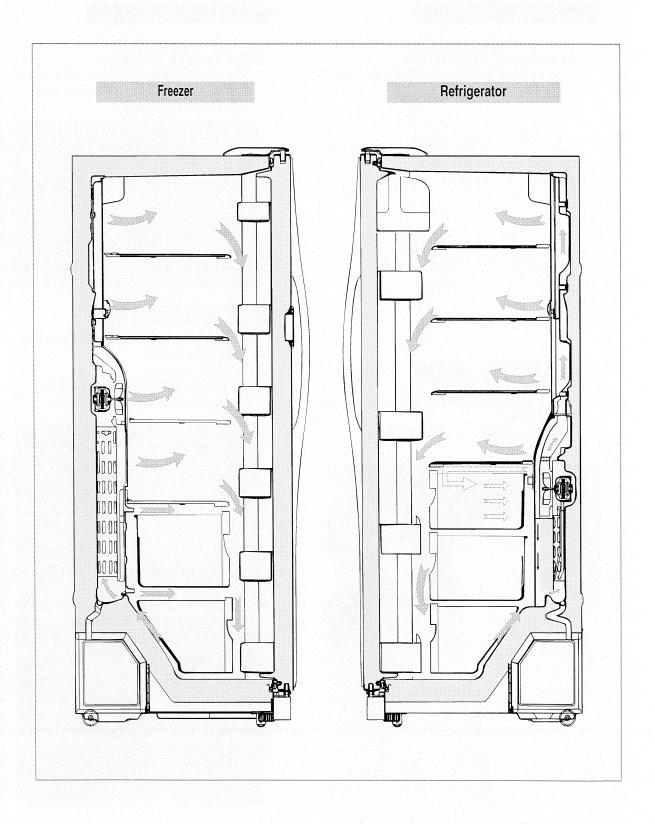


8. MECHANICAL DISASSEMBLY

8-1. Freezer Disassembly

Control Panel


- 1. Insert a flat-blade screwdriver on the slot as shown and unlock the tabs.
- 2. Disconnect the wire connector in the back of control panel

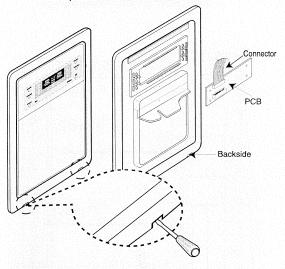

Door Gasket

The door gasket is set into groove on door liner


1. Open the door.2. Grasp the gasket and pull it out from

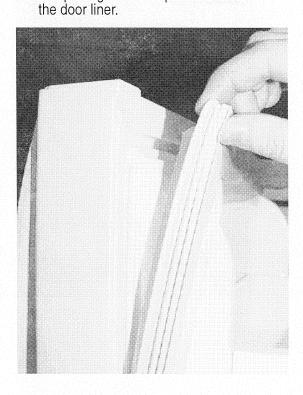

Light SWITCHES

The unit have two light switches on the side wall of freezer & refrigerator.


1.Use a small flat-blade screw driver to unlock the hook and pull the switch out until the wire connector is exposed.

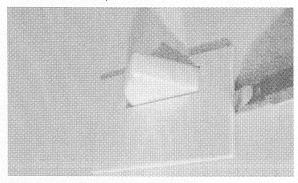



Lights (Dispenser MODEL)

The light of freezer is located at lower side of Auger motor case.

- 1.Remove ice bucket.
- 2.Remove the lamp cover by releasing the screw.
- 3. Change the bulb (rated component)

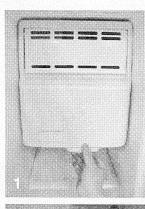

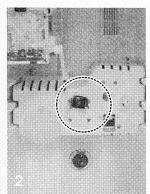

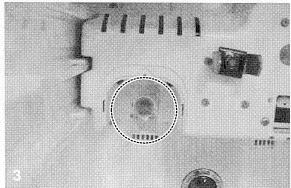


Lights (Basic MODEL)

Refer to Refrigerator Disassembly Disassemble/assemble method is same as the light in refrigerator


Door Guard in FREEZER

Lift the guard up and pull it out from door liner

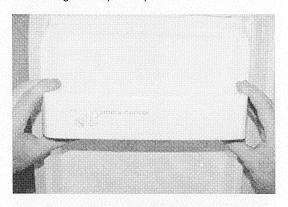

Shelves


1.Pull the shelf out as far as it goes. 2.Lift it up and pull it out from the unit.

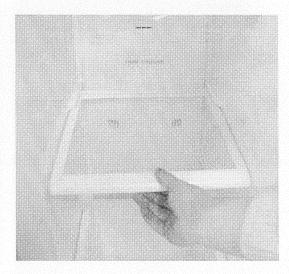

Drawers in FREEZER

The drawers are located at bottom side of freezer.

- 1. Pull the drawer out as far as it goes.
- 2.Lift it up slightly and pull it out from the unit.

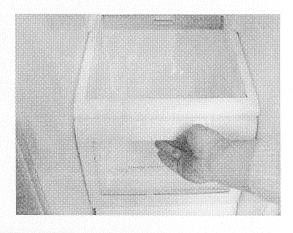

ice Bucket


The ice Bucket is located in the upper portion of the freezer. this assembly stores ice made by the ice maker and dispenses ice cubes.


- 1.Lift the ice bucket up
- 2. Slide it out from the unit.



ice Waker


1.Pull the shelf out as far as it goes. 2.Lift it up and pull it out from the unit.

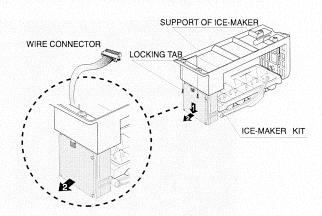


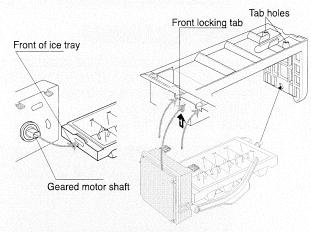

Auger Motor & case


- 1.Remove ice bucket.
- 2.Remove the screws(4) that secured the case
- 3. Slide it out from the unit. then, you can disassemble the auger motor from the back of the case.

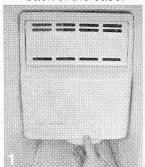

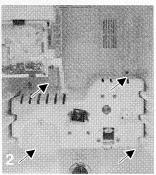


Cover Multi Freezer Assembly

- 1. Remove ice bucket and the Ice maker.
- 2. Remove the covers(1) and sensor covers(2)
- 3. Remove the screws (3pcs) that secured the assembly.
- 4. Disconnect the wire connector(③) and the connecter for Sensor (it can be possible to disconnect this connector after removing the sensor cover)

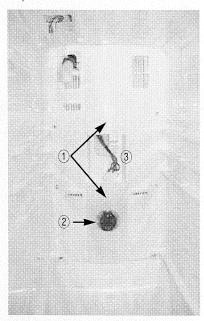

Cover Evaporator Assembly


- 1. Remove the assembly of cover multi freezer
- 2. Pull the assembly out toward front by holding upper side of the assembly up to see the connector.
- 3. Disconnect the wire connector and take the assembly out.

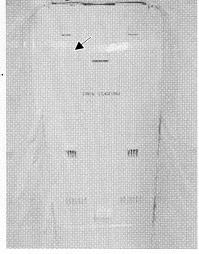

Evaporator Fan motor

Evaporator Fan Motor is located in the back side of the cover evaporator assembly.


- 1. Remove the screws(4pcs) that secured the Fan motor assembly on the 4 corner.
- 2. Remove the motor case by removing another screw and take out the motor.

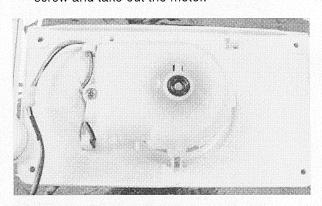

Evaporator


Evaporator is located in the bottom of freezer to produce cold air driven across evaporator coils.

- 1. Remove ice bucket and the Ice maker.
- 2. Remove the cover multi freezer assembly.
- 3. Remove the cover evaporator assembly.
- 4. Disconnect the wire connectors.
- 5. Desolder the inlet and outlet tubes.
- 6. Take the steps in opposite to seal the system as mentioned above.

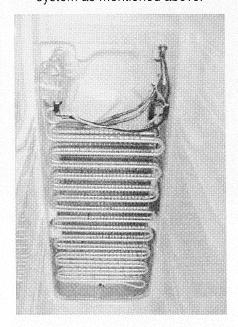


Ambien Thermistor

The thermistor is located at inside the upper hinge cover it sends temperature signal to the micro-processor.

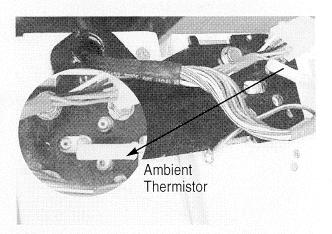

Ice Maker Thermistor

Ice Maker Thermistor is located bottom of ice tray. it sends temperature signal to the micro processor.

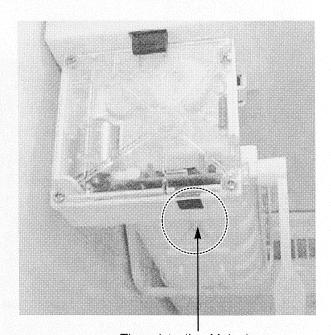


Thermistor(Ice-Maker)

8-2. Refrigerator Disassembly

Beverage Station

The beverage station allows access to the refrigerator with out opening the refrigerator door.


- 1. Open the door beverage station.
- 2. With a small flat-blade screwdriver, take out the rubber cap, then put it into the small hole and push the button inside.
- 3. Take off the door.

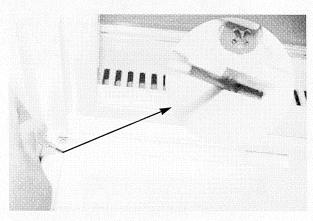

Door Gasket

The door gasket is set into groove on door liner

- 1. Open the door.
- 2. Grasp the gasket and pull it out from the door liner.

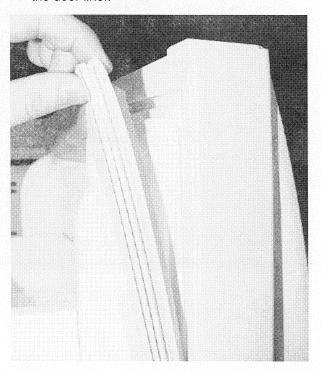

Drawers in Refrigerator

The drawers are located at bottom side of refrigerator.


- 1. Pull the drawer out as far as it goes.
- 2. Lift it up slightly and pull it out from the unit.




Lights

The light of refrigerator are located inside of cover multi ref. assembly.


- 1.Remove the lamp cover by releasing the screw.
- 2. Change the bulb (rated component)

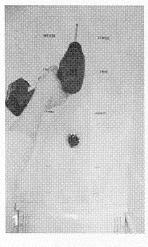

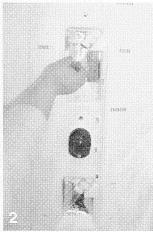


Door Guard in REFRIGERATOR

Lift the guard up and pull it out from door liner

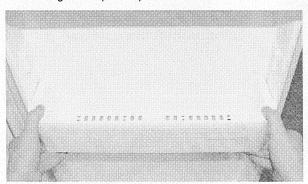

Shelves

Pull the shelf out as far as it goes.
 Lift it up and pull it out from the unit.

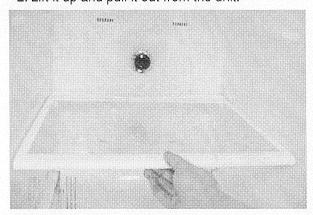

Water filter

The water filter is located in the upper left hand corner of the refrigerator. this filter filters water for ice maker & water dispenser.

- 1. Turn the water filter 1/2 turn counterclockwise and pull it down.
- 2. To install the filter align the indication mark(unlock


position) and push it up while turning 1/2 turn clockwise up to the lock position is aligned. Do not over tighten.

CoolSelect zone™(Optional)


- 1. Remove all shelves.
- 2. Remove two screws that secured.




3. Disconnect the wire connector.

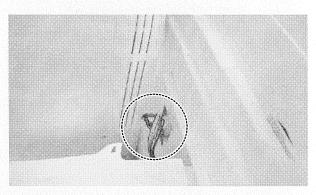

4. Remove the screw for disassembling the PBA board for controlling CoolSelect zone™

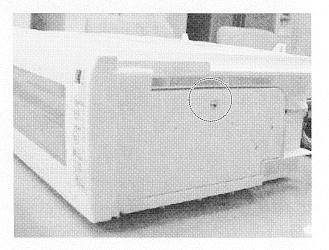



5.Disassemble the PBA board.

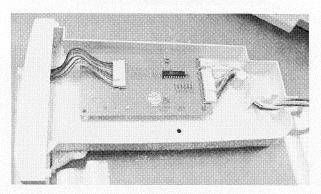


Cover Multi REF.

1. Remove the screw and cover lamp. then, remove the sensor cover.

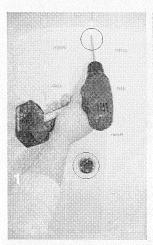

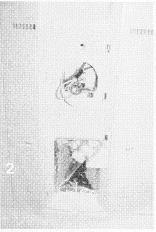


2. Remove the screw and disconnect the wire connector, then pull it out.

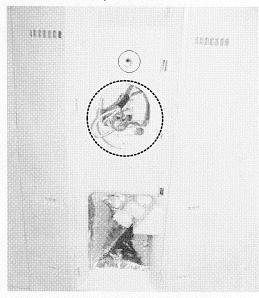


8-3. Machine compartment


Machine Compartment & Electric Box


1) Disconnect the compressor cover by releasing the screws(6EA).

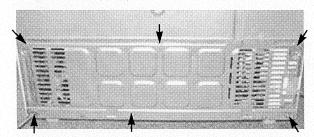

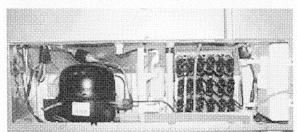

 Remove the screws which are securing the electric box. and press the tap in electric box coverto take outbyusing a flat-blade screw driver.

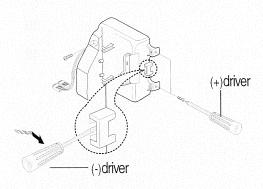


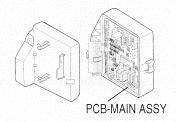

Condenser Fan

The condenser fan is located in the middle of machine compartment it cools down the subcondenser and compressor.


- 1) Disconnect the wire connector of Fan.
- 2) Remove the screws (1 EA) on the drain water tray.
- 3) Take out the condenser fan assembly.

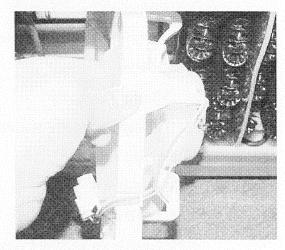

Sub-condenser

The sub-condenser is located in the machine compartment.

- 1) Desolder the compressor discharge & the outlet of sub-condensor.
- 2) Take out the sub condenser.

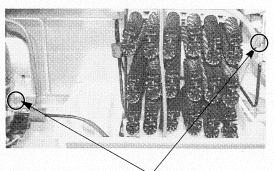

Desoldering Point

9-1) Digital Panel	30
9-2) Temperature Control Function	30
9-3) Power Freeze and Vacation	31
9-4) Child Lock Function	31
9-5) Ice & Water Dispenser Function	32
9-6) C-Fan Motor Delay Function of the Machine Compartment	32
9-7) CoolSelect Zone™ Function	32
9-8) Water Filter Indicator Function	33
9-9) Ice-Maker Function	33
9-10) Defrost Function	35
9-11) Forced Operation Function (Pull-down/R-Defrost/R,F-Defrost/Cancellation)	36
9-12) Sound Function	37
9-13) Exhibition Function	37
9-14) Self-Diagnostics Function	37
9-15) Load Operation Check Function	37
9-16) Restoration Function for Power Outage	37
9-17) Set Point Shift Function	39
9-18) Table of Set Point Shift Function	40

9-1) Digital Panel



for Basic



for Dispense Model



for Cool Select ZoneTM

9-2) Temperature Control Function

When the system power is initally engaged, the default set temperature are -20°C for the freezer and 3°C for the set refrigerator, respectively. The numbers shown on the digital display panel stand for the actual compartments temperatures. When the compartment temperatures go down, so do the numbers on the display panel, and finally they reach the set temperatures. Once the system is stabilized, the display temperatures are the set temperature.

- 1) Freezer Temperature Control.

 To select a set temperature, press the Freezer Temp. button. The display shows the set temperature from -14°C to -25°C in sequence.
- 2) Refrigerator Temperature Control.

 To select a set temperature, press the Fridge Temp. button. The display shown the set temperature from 1°C to 7°C in sequence.
- note) Because of the temperature sensor sensivity, the refrigerator can be under and/or over cooled when the air flow is blocked by stored foods. (Temperature range of the sensor: -9°C ~30°C) In the event of a power failure, if the freezer temperature is maintained lower than 5°C, the last selected set temperature and functions memorized in EEPROM will be restored when the power is on.

9-3) Power Freeze and Vacation Functions

- Select the Power Freeze or Vacation buttons separately.
- These buttons are toggled ON and OFF and the indicators as well.
- Although you select Power Freeze or Vacation, the set temperatures in the freezer and refrigerator are not changed.
- The set temperatures for the compartments can be changed while these functions are in use.
- 1) Power Freeze function
 - 1-1) When you press the Power Freeze button, the LED indicator lights right away, but there is 10 seconds lag time to an actual operation. When this button is pressed again, the Power Freeze function stops and the indicator is off immediately.
 - 1-2) If you select Power Freeze, both the compressor and the freezer fan run for 10 hours continuously.
- note) When the Power Freeze is selected, it enables maximum ice maker output. The ice making interval is reduced from 90 mins to 55 mins (55 mins after the water delivery, if the ice temperature is maintained lower than -7 °C, the ice tray will be twisted). When the ice bucket is full before 10 hours of operation, Power Freeze is automatically terminated.
- 1-3) During Power Freeze, the freezer retains the current settings.
- 1-4) When Power Freeze expires, the indicator goes off and the freezer set temperature will be restored.
- 2) Vacation function
 - 2-1) When Vacation is selected, Refrigerator fan is turned off, Ice off is selected automaically.
 - 2-2) Though Vacation function is selected, Refrigerator fan does not turned off but turned on for initial 5minutes.
 - 2-3) Vacation function is selected/canceled by Vacation button. it can be canceled by temperature control button of Refrigerator while Vacation function is selected.
 - 2-4) While Vacation function is working, Vacation lamp is ON, and temperature display of Refrigerator is OFF.
- 3) Initial Power-On
 - 3-1) The freezer and the refrigerator temperatures are higher than -10°C and 10°C espectively if, respectively. If Power Freeze is selected, the R-FAN will be off.when freezer temperature, R-FAN operates.

9-4) Child Lock Function

• When the child lock button is pressed for 3 seconds, the child lock indicator is on with an audible tone. when it is locked, all keys can not be modified except the lce type button. This function will prevent accidental setting that may be caused by children or pets. To unlock the setting functions, press this button for 3 seconds again. Also, this button has another function. When this button is pressed for 3 seconds (lock indication lamp turn on), the heater for sweat control and all lamps are off except the ice type lamp and child lock indication lamp at a same time.

If sweat is appeared around the cover dispenser or beverage station, press this button for 3 seconds again. then, the light will turn off and the sweat control function will be performed. and all keys will be unlocked at a same time.

9-5) Ice & Water Dispenser Function

- Among several ice-maker functions, the ice extraction function is performed by mechanical system. Only the relay
 control for a cubed-ice dispensing and the SSR control for the ice chute door are performed electronically.
- 1) Select Cubed/Crushed/Ice-off function
 - 1-1) The Ice Type button selects Cubed/Crushed/Ice-off options in sequence.
 - 1-2) A default setting is Cubed option.
 - 1-3) If Cubed ice is selected, the Crushed ice bypass solenoid and the geared motor will allow Cubed ice to by pass the ice Crusher.
 - 1-4) If Ice-off is selected, the ice maker will stop working. This option will be terminated when Cubed and Crushed options are selected.
- Note) When the Ice-off indicator is on and the remained ice is in tray, only Cubed ice will be dispensed from the ice bucket
- 1-5) The ice chute door must be open for 5 seconds after dispensing ceases. After this 5 seconds delay, SSR will be controlled to shut the ice chute door.

Note) Do not force to close the ice chute door. Try to dispense some more ice again to work it automatically.

- 2) Water Dispenser function
 - 2-1) To dispense water, depress the water dispenser lever located in the dispenser recess.
 - 2-2) When the lever is depressed, the water solenoid valve located in the machine compartment is open to flow water.
- 2-3) There is no electronic control function for this option.

9-6) C-Fan Motor Delay Function of the Machine Compartment

 According to the ambient temperature, the condenser fan located in the machine compartment is operated with different modes.

	Ranges of ambient temp.	Operation
O FAN	Above 19°C	C-FAN is ON as soon as the compressor is on.
C-FAN - Delay function -	16°C ~ 18°C	C-FAN is ON with 5 minutes delay from the compressor on.
	Below 15°C	C-FAN is OFF regardless of the compressor operation.

9-7) CoolSelect Zone™ Function (00000/00000)

- To select this function, open the refrigerator door and press the button on the control panel of CoolSelect Zone ™
 drawer.
- When the CoolSelect Zone[™] function is selected, the damper inside fan ductwork is open. So the refrigerator cooling
 is performed first, then the damper is closed to control the CoolSelect Zone[™] temperature.


- 1) Select function
 - 1-1) Using Select button, Cool, Chill(-1°C), and Soft Freeze(-5°C) options can be selected in sequence. Cool option maintains a set temperature of the refrigerator.
- 2) Quick Cool function
 - 2-1) If the Quick Cool is selected, LEDs will flash 60 and Min. The count will be decreased in every minute.
 - 2-2) To cancel this function, press Quick Cool button again or Thaw button or Select button. Otherwise, it will be terminated 60 minutes later automatically.
 - 2-3) After this function ends, this drawer will come back to Cool option.
 - 2-4) A defrost cycle will be postponed until Quick Cool option is finished.
- 3) Thaw function
 - 3-1) When the thaw button is pressed, LEDs will flash 4, 6, 10, and 12 in sequence and Hr.
 - 3-2) The count will be decreased in every hour.
 - 3-3) A cancellation of this function is same as Quick Cool function.
 - 3-4) After this function ends, this drawer will be maintained with -1°C.
 - 3-5) While the compressor is on, this drawer retains a certain temperature and while the compressor is off, the defrost heater is activated and R-FAN is on with a closed position of the damper.

9-8) Water Filter Indicator Function


- 1) Filter Indicator
 - 1-1)This indicator initally lights in green. The light color will be changed to orange after 5 month operation then to red at the 6th month. The EEPROM in the control board counts a period of time regardless of a power failure.
- 1-2) To reset the counter and the light color, press Ice Type button and Child lock button for 3 seconds simultaneously.
- 1-3) If these two buttons are pressed simultaneously for 5 seconds, this function will cease.
- 1-4) To restore this function, press these buttons again for 3 seconds.

9-9) Ice-Maker Function

- The Ice-maker is referred to the device with an automatic ice production, storage in the ice bucket and dispensing through the ice chute.
- 1) Ice-maker parts

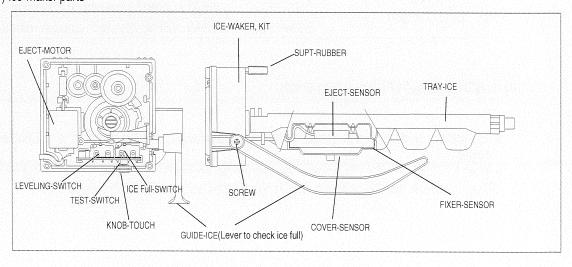

- 2) Preparation of Ice-maker
 - 2-1) Connect the water line to the water supply valve of refrigerator to supply water. (See how to connect a water supply line in the owner's manual.)
 - 2-2) Push the bucket back fully so that the guide-ice of ice maker should not touch the back of bucket. (If the back of bucket touches the guide-ice of ice maker, the ice maker will not make ice any more because of a ice full signal.)
 - 2-3) It takes 6 hours to have a first ice, and throw away 2-3 times of these ice to make sure the supplied water clean.

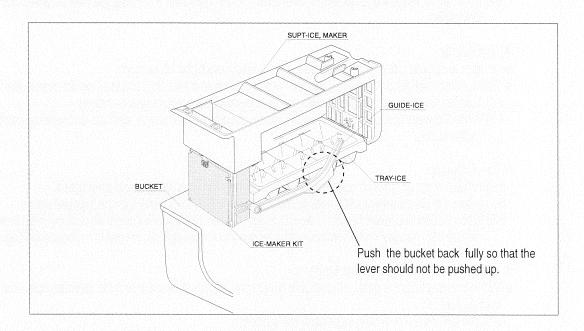

1) Initial Operation function

- 1-1) Whenever the power is on, the control board checks the ice tray leveling with the leveling switch within 2 seconds.
- 1-2) If the leveling switch is not off position, the geared motor will turn to the initial position to make the ice tray leveled.
- 1-3) When the ice tray is leveled, it will remain this position for 2 hours (1 cycle time for ice production).
- 1-4) After 2 hours, the sensor located under the ice tray will measure the tray temperature. If the temperature is maintained lower than -7 °C for 5 minutes, and the ice full switch is off position, the ice tray twisting process will begin.

<Reference table>

Leveling S/W	Ice full S/W	Judgement	Remark
ON("LOW")	ON("LOW")	Not ready	· MICOM Port
ON("LOW")	OFF("HIGH")	Not ready	PIN #51: Leveling
OFF("HIGH")	ON("LOW")	Not ready(Ice bucket with full of ice)	PIN #51: Ice full Port level
OFF("HIGH")	OFF("HIGH")	Ready	OFF : 4.5V ↑ ON : 0.5V ↓

- 2) Water Supply function
 - 2-1) When the ice tray is leveled again after ejecting ice, the water solenoid value will be controlled to supply water by time check basis. (See the "Time to supply water" Table)
- 3) Ice production
- 3-1) After 90 minutes pass from the water supply, the control board will check the temperature.
- 3-2) If the sensor reads the temperature lower than -7°C for more than 5 minutes, than the ice production process is completed.
- 4) Test function
- In order to operate a test function, press the knob (Test Switch) for 1.5 second.
- This function can be used to check a proper working, to clean the ice tray, and to adjust the water level in the ice tray.
- 4-1) This function only works when the ice tray is leveled and the ice full signal is cleared.
- 4-2) When the water line is connected, each process such as a water supply, ejection, and leveling, can be investigated by this button.
- 5) Ice off function
- 5-1) When the Ice off option is selected by Ice Type button, the ice making process will cease.
- 5-2) When the ice making process ceases, the final state will be the ice tray with the supplied water.
- 5-3) When Cubed or Crushed option is selected again, the control board will check an accumulated time period. After making it 90 minutes and when the ice tray temperature is acceptable, ice ejection process will begin.
- 6) Functions when the freezer door is open
- When the freeze door is open, all ice maker related processes will cease in order to minimize noise and to prevent ice from dispensing.
 - 6-1) The ice tray stops moving regardless of the position.
 - 6-2) The water supply process remains working as usual.
 - 6-3) If the ice tray is in the middle of ice ejecting process, close the freezer for 30 seconds and check if the tray is leveled. If it is not leveled, it must be out of order.

9-10) Defrost Function

- 1) A defrost is determined based on the accumulated compressor on-time.
- 2) When the power is engaged for the first time, the defrost cycle for the freezer and the refrigerator will begin after 4 hours of the accumulated compressor on-time.
- 3) A defrost interval depends on the ambient temperature, the number of door openings, and the door open time.
- 4) A minimum interval is 6 hours and a maximum is 8 hours for the refrigerator, and 12 hours and 16 hours for the freezer, respectively.
- 5) The defrost heater on-time is determined by the defrost sensors as follow:

	Refrigerator	Freezer
Heater ON	Below 10°C	
Heater OFF	17°C	10°C

9-11) Forced Operation Function (Pull-down / R-Defrost / R.F-Defrost / Cancellation)

- This function enables a pull-down mode, a defrost mode for the refrigerator only, a defrost mode for the freezer and the
 refrigerator at the same time, and a cancellation of this function.
- Press Power Freeze and Fridge Temp. buttons for 8 seconds simultameously to get in the ready mode for a forced operation.
- The display panel will return to normal after 20 seconds in the ready mode.
- At the ready mode, press any button(except Ice Type and Child Lock) once to start a pull-down operation, twice for a
 defrost cycle for the refrigerator, three times for a defrost cycle for the freezer and the refrigerator, and finally four times
 for cancellation of this function.
- Another way to cancel this function is to simply plug out and in the power cord.

Press both button for 8 seconds at the same time.



1) Pull-down Operation

- 1-1) At the ready mode, press any button once then the buzzer will beep (ON for 1/2 second and OFF for 1/2 second) until this mode is cancelled.
- 1-2) At this pull-down mode, the compressor will start immediately (No 5 minute delay) and if the system is in the defrost cycle, it will be cancelled right away.
- Note) If this pull-down mode begins right after the compressor was off, the compressor may not start to run due to an overload condition.
 - 1-3) At this mode, the compressor and freezer fan will operate continuously for 24 hours and the refrigerator fan will be on and off according to the set temperature(-20 °C)
 - 1-4) After 24 hour operation, the system will be cycled at -25°C for the freezer and 1°C for the refrigerator.
 - 1-5) In order to cancel this mode at any time, select the next mode on the ready mode or power off the system.

2) Defrost operation

- 2-1) At the pull-down mode, press any button again on the ready mode to begin the defrost cycle for the refrigerator.
- 2-2) The beep sound continues for 3 second at the beginning, then ON for 3/4 seconds and OFF for 1/4 second until this mode cease.
- 2-3) After this operation, the system will come back to normal operation.
- 2-4) At this mode, press any button again on the ready mode to operate the defrost cycles for both compartments.
- 2-5) The beep sound continues for 3 seconds at that time, then ON for 1/4 second and OFF for 3/4 seconds until the defrost operation cease.

3) Cancellation

- 3-1) At the R,F-Defrost mode, press any button again on the ready mode to return to a normal operation.
- 3-2) Simply unplug the power cord, then plug it again to return to a normal operation.

9-12) Sound Function

- 1) Sound function
 - 1-1) To make sure a command input, whenever a button is pressed, a "ding-dong" sounds.
 - 1-2) When two or more buttons are pressed simultaneously or if a wrong button is pressed, there is no sound.
- 2) Door Open Alarm
- 2-1) When the doors remain open for 2 minutes, there are 10 times beeps.
- 2-2) If the doors continue to remain open more than 2 minutes, the additional 10 beeps interval will change to 1 minute.
- 2-3) The beeps will cease immediately when the doors are closed.

9-13) Exhibition Function

- This function is for a display purpose on the floor of show room or store.
- 1) Mode ON/OFF
 - 1-1) For the exhibition mode, press Power Freeze and Freezer Temp. buttons simultaneously for 8 seconds until a "ding-dong" sounds.
 - 1-2) Press the same time buttons again for 8 seconds to cancel this mode put with a "ding-dong" sound.
- 2) Operation
- 2-1) Most of the system function except the compressor operation are working properly.
- 2-2) There is no defrost cycle in this mode.

9-14) Self-Diagnostics Function


- 1) Self-Diagnostics in the initial Power ON
- 1-1) The control board performs a self diagnostics test within 1 second and check out the temperature sensors abilities.
- 1-2) If a sensor failure occurs, a corresponding LED segment will blink with a beep.
- 1-3) When a LED segment blinks, only the cancellation function (Press Vacation and Power Cool buttons simultaneously for 8 seconds) is acceptable.
- 1-4) After a replacement of bad sensor or a cancellation of this function, this self diagnostics will end.
- 2) Self-Diagnostics in the normal operation
 - 2-1) To select this function, press Power Freeze and Vacation buttons simultaneously for 8 seconds with an audible tone.
 - 2-2) In the self diagnostic mode, only corresponding LED segments will be illuminated (see the check list on the next page)
 - 2-3) After a 30 second illumination of error signal, the system will return to the normal operation.

Operation Function

* Self-diagnostics check list

NO	Error
1	ICE-MAKER SENSOR
2	R-SENSOR
3	R-DEF-SENSOR
4	R-FAN ERROR
(5)	I/M function error
6	CoolSelect Zone™ SENSOR
7	R-DEFROST ERROR
8	EXIT-SENSOR
9	F-SENSOR
10	F-DEF ERROR
11)	F-FAN ERROR
12	C-FAN ERROR
13	F-DEFROST ERROR

Press both buttons simultaneously for 8 seconds

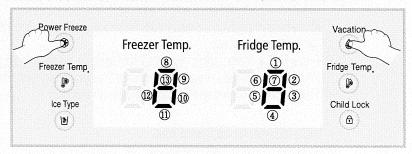

If any LEDs blink, the corresponding sensors and components must be checked for an error.

* Error items of self-diagnostics

NO	Error items	LED Display	Details	Remarks
01	I/M-SENSOR	REF. SEGMENT	I/M sensor connector missing; contact failure, electric wire cut, short-circuit; I/M-sensor failure; and so on	Indicate Error when the temperature sensed by I/M-sensor is higher than 65°C or lower than -50°C.
02	R-SENSOR	REF. SEGMENT	REF sensor connector missing; contact failure, electric wire cut, short- circuit; R-sensor itself failure; and so on	Indicate Error when the temperature sensed by R-sensor is higher than 65°C or lower than -50°C.
03	REF DEFROST SENSOR	REF. SEGMENT	REF evaporator internal defrosting sensor connector missing; contact failure, electric wire cut, short-circuit; sensor itself failure; and so on	Indicate Error when the temperature sensed by R defrosting sensor is higher than 65°C or lower than -50°C.
04	R-FAN ERROR	REF. SEGMENT	R-Fan motor operation failure; feedback signal line contact failed, electric wire cut, short- circuit; and so on	Indicate Error if the F and G signals generated by the FAN-motor operation are not input.
05	I/M function ERROR	FREEZER SEGMENT	Ice-ejector and level failed three times or more	
06	CoolSelect Zone™ sensor	REF. SEGMENT	CoolSelect Zone TM sensor connector missing; contact failed, electric wire cut, short-circuit; CoolSelect Zone [™] sensor itself failed; and so on.	Indicate Error when the temperature sensed by CoolSelect Zone™ sensor is higher than 65°C or lower than -50°C.
07	R-DEFROST ERROR	REF. SEGMENT	In the refrigerator room, if frost removal mode is finished due to limited time of 80 minutes. Error is displayed.	
80	Ambient Air SENSOR	FREEZER SEGMENT	Air sensor connector missing; contact failure, electric wire cut, short-circuit; open air sensor itself failure; and so on	Indicate Error when the temperature sensed by the open air sensor is higher than 65°C or lower than -50°C .
09	F-SENSOR	FREEZER SEGMENT	FRE sensor connector missing; contact failed, electric wire cut, short-circuit; F-Room sensor itself failure.	Indicate Error when the temperature sensed by F-sensor is higher than 65°C or lower than -50°C.
10	FRE Defrost SENSOR	FREEZER SEGMENT	FRE evaporator defrosting sensor connector missing; contact failed, electric wire cut, short-circuit; sensor itself failure; and so on	Indicate Error when the temperature sensed by F-defrosting sensor is higher than 65°C or lower than -50°C.
11	F-FAN ERROR	FREEZER SEGMENT	F-Fan motor operation failure; feedback signal line contact failure, motor's electric wire missing; and so on.	Indicate Error if the F and G signals generated by the FAN-motor operation are not input.
12	C-FAN ERROR (COMP-FAN)	FREEZER SEGMENT	C-Fan motor operation failure; feedback signal line contact failure, motor's electric wire missing; and so on.	Indicate Error if the F and G signals generated by the FAN-motor operation are not input
13	F-DEFROST ERROR	FREEZER SEGMENT	In the freezer room, if frost removal mode is finished due to limited time of 70 minutes. Error is displayed	-

Operation Function


9-15) Load Operation Check Function

- 1) In the normal operation, press Power Freeze and Vacation buttons simultaneously for 6 second, then the display panel will blink for 2 seconds.
- 2) Press Fridge Temp. button ⓐ to get into this check mode with an audible tone.
- 3) Each illuminating LED segment stands for the component which has an ouput signal from the control board.
- 4) This mode will terminate automatically after 30 seconds.

* Table of Load Mode Check List

NO	Contents		
1	R-FAN High or AC motor operation		
2	R-FAN Low		
3	R-DEF heater		
4	Start mode		
(5)	Overload mode		
6	Low-temperature mode		
7	Exhibition mode		
8	COMP		
9	F-FAN High		
10	F-FAN Low		
11)	F-DEF-Heater		
12)	C-FAN High		
13)	C-FAN Low		
14)	Dispenser-Heater		
(15)	Damper		
-	Normal condition		

Press both buttons simultaneously for 6 seconds, all LED lights will be turned off. At this time press button (a)

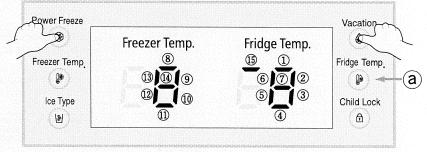

- * For the R-FAN, only one rpm is applied for the current models, so that ① and ② show R-FAN operation only.
- * The F-FAN and C-FAN are operated to High/Low rpm automatically according to the operational condition.
- * 45 and 6 only explain the system operation status according to the ambient condition


9-16) Restoration Function for Power Outage

- 1) When the freezer temperature is lower than 5°C, all functions on the display panel will be restored.
- 2) When the freezer temperature is higher than 5°C, all functions will be initialized. (-20°C for the freezer, 2°C for the refrigerator, and Cubed for the Ice Type)

9-17) Set Point Shift Function

- Press Freezer Temp. and Vacation buttons simultaneously for 12 seconds to get into this mode.
- In this mode, only the display LEDs for temperature will be ON.

Press both buttons simultaneously for 12 seconds

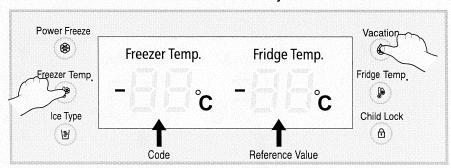

- 1) Initially, all products set the code, "0" and press Vacation or Fridge Temp. to increase or decrease # of Reference.
- 2) To increase or decrease #of Code,press the Power Freeze or Freezer Temp. so that it can be adjusted such as the temperatures of freezer,refrigerator,lce maker,and CoolSelect Zone™,and the quantity of water supply.
- 3) After 20 seconds from adjustment, a new setting will be stored in EEPROM and return to the normal display.

9-18) Table of Set Point Shift Function


1) Shift the freezer temperature sensor

Reference Value	0
-----------------	---

Code	Temp. shift	Code	Temp. shift
0	0	8	0.5℃
1	− 0.5°C	9	1.0℃
2	− 1.0°C	10	1.5℃
3	− 1.5°C	11	2.0°C
4	−2.0°C	12	2.5°C
5	− 2.5°C	13	3.0℃
6	− 3.0°C	14	3.5℃
7	−3.5°C	15	4.0°C

Operation Function


Example) If you are lowering the current temperature of the freezer by -3.0°C

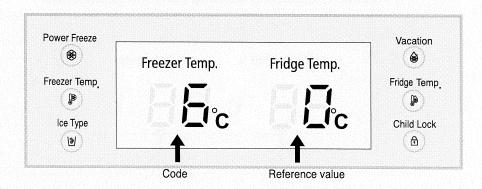

2) Shift the refrigerator temperature sensor

Reference Value	1		
Code	Temp. shift	Code	Temp. shift
0	0	8	0.5°C
1	− 0.5°C	9	1.0°C
2	- 1.0°C	10	1.5°C
3	−1.5°C	11	2.0°C
4	-2.0°C	12	2.5°C
5	−2.5°C	13	3.0°C
6	−3.0°C	14	3.5°C
7	−3.5°C	15	4.0°C

Example) If you are raising the current temperature of the refrigerator by $+1.5^{\circ}\text{C}$

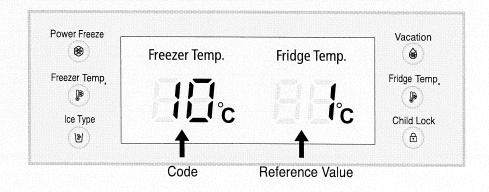

Operation Function

- The following options is limited to a model with the Ice Maker.
- 3) Adjust the time to supply water for the ice maker

Reference Value	3
Code	Time to supply water
0	5 sec
1	4 sec
2	3 sec
3	6 sec
4	7 sec
5	8 sec
6	9 sec
7	10 sec
8	12 sec
9	13 sec
10	15 sec
11	17 sec
12	19 sec
13	21 sec
14	23 sec
15	25 sec

5) Shift the CoolSelect Zone™ temperature sensor.


Reference Value	20
Code	CoolSelect Zone™ temperature sensor
0	0
1	− 0.5°C
2	−1.0°C
3	−1.5°C
4	0.5℃
5	1.0℃
6	1.5°C
7	2.0°C

4) Shift the Ice maker temperature sensor

Reference Value	4
Code	lce maker temperature sensor
0	-7°C
1	-6°C
2	-8℃
3	-9°C
4	-10°C
5	-11°C
6	-12°C
7	-13°C

10-1) Source Power Circuit	44
10-2) Oscillator Circuit	44
10-3) Reset Circuit	44
10-4) Door S/W Sensing Circuit	45
10-5) Temperature Sensing Circuit	45
10-6) Key Scan and Display Circuit	46
10-7) CoolSelect Zone™ Panel Circuit	48
10-8) Fan Motor(BLDC) Drive Circuit	49
10-9) EEPROM Circuit	50
10-10) Option Circuit	50
10-11) Load Drive Circuit	50


10-1) Source Power Circuit

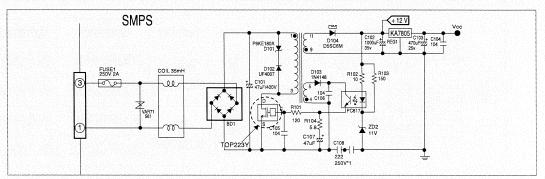

This circuit shows SMPS(Switch Mode Power Supply) which converts AC input voltage (230V, 50Hz) to a high DC voltage (about 320V). The input AC source power is converted to DC through a wave rectifier (BD1) and the converted DC power will generate a constant waveform on the switching transformer using a high speed (100KHz) switching motion of TOP223Y. The D104 will rectify the generated voltage and transform into a steady 12V DC source power used for the digital display panel and relays. The regulator (KA7805) finally transforms into 5V DC source power for the control board and sensor's circuits.

Caution) Be careful to handle this circuit due to high voltages (AC115V, DC170V)


10-2) Oscillator Circuit

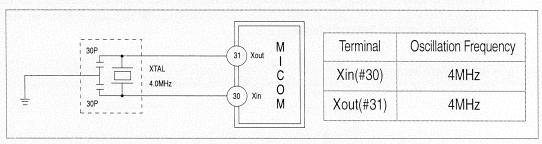

This is oscillator circuit to generate synchronous clocks used to calculate the time for the microprocessor operation.


Note) If the specification of a resonator changes, micro-processor can not work properly.

10-3) Reset Circuit

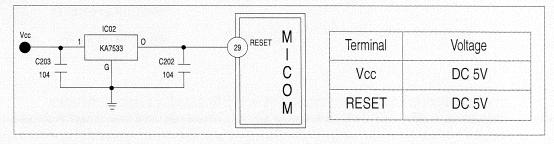


The reset circuit is to initialize the values RAM & other sectors of micro-processor. When the power is engaged initially, the reset voltage becomes "Low," and it keeps "High" in the normal operation.

10-4) Door S/W Sensing Circuit

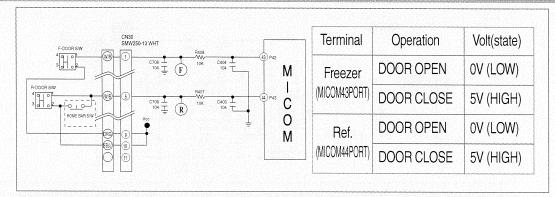


- 1) F-Room door open is picked up based on the state (5V/0V) of the MICOM No.43 Port. When the F-Room door opens, it becomes short between the Door S/W 1 &2.And,5V is supplied in the following order. CN30 No.⑨ → F-Door S/W → CN30 No.⑪ → R408(1 0K)→MICOM 43 PORT When the state of MICOM 43 PORT is 0V, the door is picked up as closed. When it is 5V, the door is considered to be open.
- 2) R-Room door open is picked up based on the state (5V/0V) of the MICOM No.44 Port. When the R-Room door opens, it becomes short between the Door S/W 1 &2.And,5Vis supplied in the following order. CN30 No.® → R-Door S/W → CN30 No.® → R407(1 0K)→MICOM 44 PORT When the state of MICOM 44 PORT is 0V, the door is picked up as closed. When it is 5V, the door is considered to be open.
- 3) When door open is detected, the MICOM have the relevant Fan Motor stop and the relevant Room Lamp light up. Depending on the state of Door Open/Close, there are following operations; Lamp On/Off, Fan Motor On/Off and Door open alarm. So, check relevant items upon A/S.

10-5) Temperature Sensing Circuit

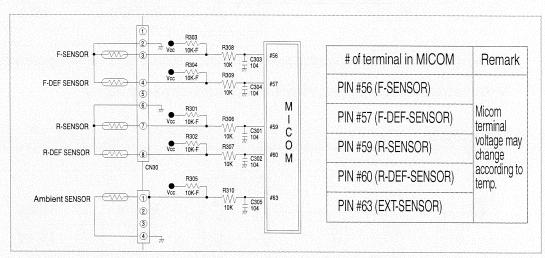


- 1) A thermistor with a negative temperature coefficient (NTC) is used for a temperature sensor.
- 2) Resistors, R 306 \sim R310 and capacitors, C 301 \sim C 305 are used for a noise protection purpose.
- 3) For the F-sensor, the input voltage into the micro processor (MICOM), VF is calculated by (Rth x Vcc)/(R303+ Rth), where Rth is a corresponding resistance to the thermistor's output (See Ref. 6 in Appendix).
- 4) The F-Def sensor is connected with a bimetal and a temperature sensor is in parallel. In a normal operation of the system, the bimetal is on and 0V is input into the micro-processor. During a defrost cycle, the bimetal will be off from 54°F, and a divided voltage with R304 enter to the micro-processor to keep sensing the set temperature.


10-6) Key Scan and Display Circuit

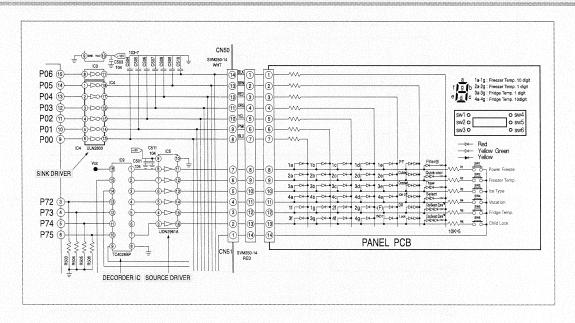

1) Key Scan and display operation.

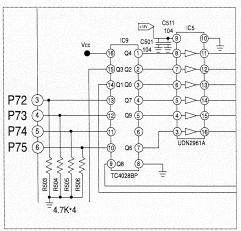

The model uses a decorder IC which 4 inputs and 9 outputs. If the IC 9 decorder (TC4028BP) receivesd signals from MICOM pins (3 \backsim 6), an output signal per 2 miliseconds comes out from Q3, Q41, Q8, Q6, Q9, Q7, Q0, Q2, and Q4 pin in sequence. This signal enters to a driver IC input terminal of the CoolSelect ZoneTM PCB and IC5 (TD 62783AP), then approximate 11V peaks will generate from an output terminal as shown on the next page.

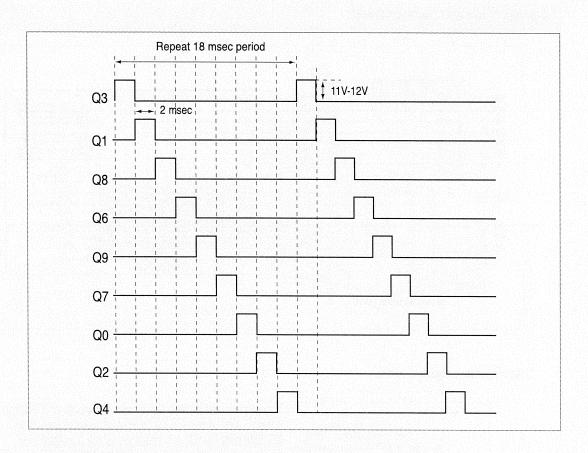


The step signals of DC 11 \sim 12V will be generated periodically. If a sink signal outputs from IC4, DC 11-12V will be applied to the LED input terminal and sink the LED output terminal to 0V. Therefore, LED will be ON for 2 miliseconds.

2) Key Scan

The 6 step signals, Q6~Q4 are applied to scan the 6 keys (buttons). When SW6 is pressed, the step signal from Q6 will be reduced to 5V and entered to the MICOM, then MICOM will match a corresponding function for SW6 key.


10-7) CoolSelect Zone™ Panel Circuit

1) CoolSelect Zone™ display panel and temperature sensor

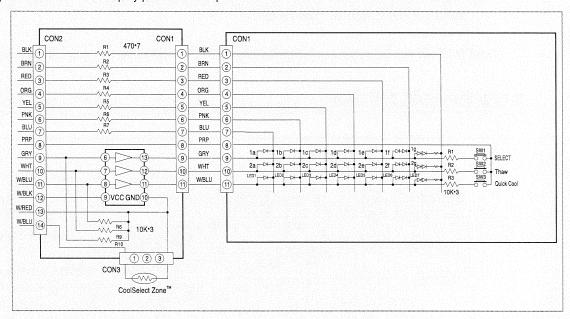

- 1-1) CoolSelect Zone™ is referred to as a storage drawer to implement features of Quick cool, Thaw, and Select (Soft Freeze, Chill, and Cool).
- 1-2) CoolSelect Zone™ has an additional display panel. Panel LED are off while the doors are closed. When a door is open, micro-processor senses its signal and LEDs will be on.
- 1-3) The basic operational principle is the same as the key scan process.
- 1-4) The additional sensor can measure the temperature of CoolSelect Zone™. This sensor enables to control the features of CoolSelect Zone™.


2) Damper drive circuit

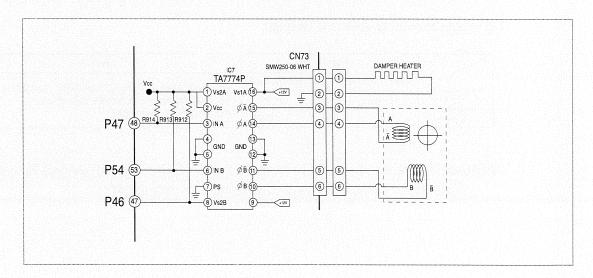

- 2-1) CoolSelect Zone™ Drawer is controlled by a damper to supply or block cold air. For Quick Cool, the damper will be close. So cold air is supplied only to CoolSelect Zone™ Drawer. For Thaw, the evaporator heater of refrigerator is ON and the damper is controlled by the refrigerator temperature.
- 2-2) The stepping motor controlled by a Driver IC TA7774P(IC7) operates the damper. The stepping motor uses 4 combined signals to open and close the damper.

Note) To prevent the malfunction from a high humidity, a DC 12V, 1 watt heater is mounted and activated continuously.

10-8) Fan Motor (BLDC) Drive Circuit

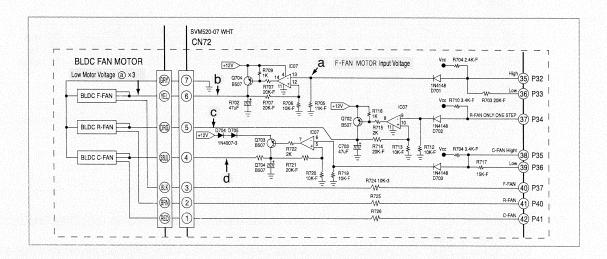

1) Motor drive circuit

- 1-1) This refrigerator adopts a BLDC motor froeduce energy consumption, Motors of the freezer, refrigerator and the machine compartment are composed of the BLDC. For RS2533, R-fan is operated by AC 115V Motor.
- 1-2) Voltages between high-speed and low-speed

	Voltage of motor			Remark	
	Measure b (F-FAN)	Measure C (R-FAN)	Measure d(C-FAN)	In the normal operation, MICOM No. 40, 41 and 42 applies a constant frequency; and	
High	11.1V	10V	10V	MICOM defects the signal to check the failure of motor.	
Low	10V	10V	8.3V	(frequency(Hz) × 12 = motor rpm)	


Note) Under the conditions, the fans will be operated in 2 options, such as High and Low mode. Generally, it is operated in the High mode during a day time and in the Low mode at night.

1-3) When the motor rpm is in 600~700, it will stop automatically and it tries to resume after 10 seconds. If the motor is not working properly after 5 time trials, it will rest for 10 minutes, then try to resume again. This process will be done continuously.

Note) If there is an abnormal situation for the motor, the self-diagnostics will show the corresponding LED segment.


10-9) EEPROM Circuit

EEPROM is semiconductor memory not to be erased. It can be used in the area of unstable electric power.

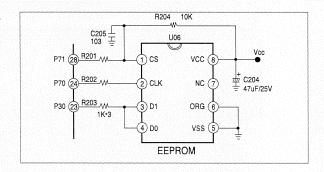

10-10) Option Circuit

There are a variety of models that have a different function. A different model can set up to use option circuit as shown.

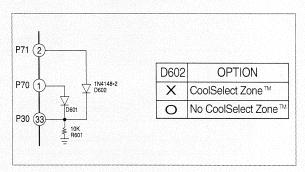



10-11) Load Drive Circuit

- 1) The control of load in the system is accomplished by the main PCB.
- 2) Most of relays or SSRs can control the compressor, refrigerator/freezer defrost heater, and several option functions.
- 3) For the compressor, #18 pin of micro processor signals High (5V). This signal enters #5 pin of IC3 and #14 of output terminal which have base and collector functions of IC3 turns on and connects the GND. Relay 73 will be grounded through #14 of IC. Magnetic field will generate so that the second side of RY73 is activated and 115V is supplied to the compressor. On the other hands, if #18 of micro processor turns Low(0V), #5 of IC3, the current of RY 73 relay, and magnetic field will shut down in sequence. A contact point in secondary side of Relay 73 is off. Finally compressor will stop.

4) The principles of other loads is the same as 3) item described.

Note) SSR(Solid State Relay) is a kind of Relay.



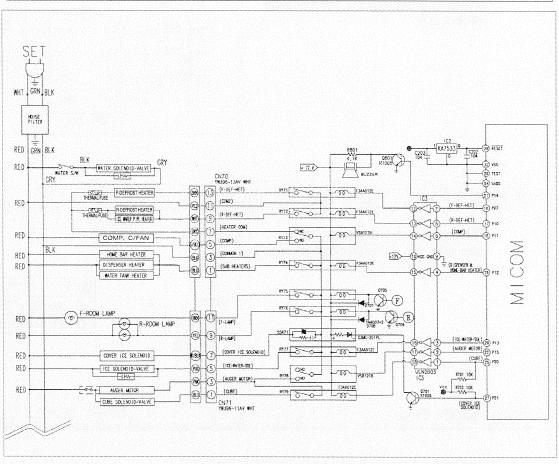


11-1) If power is not ON


Carrier

At the power of main PCB, the 115V power and a high-voltage over DC 170V occur. Please take care of yourself on repair and measurement.


To check the main PCB, please apply descriptions of operation and references in the manual.

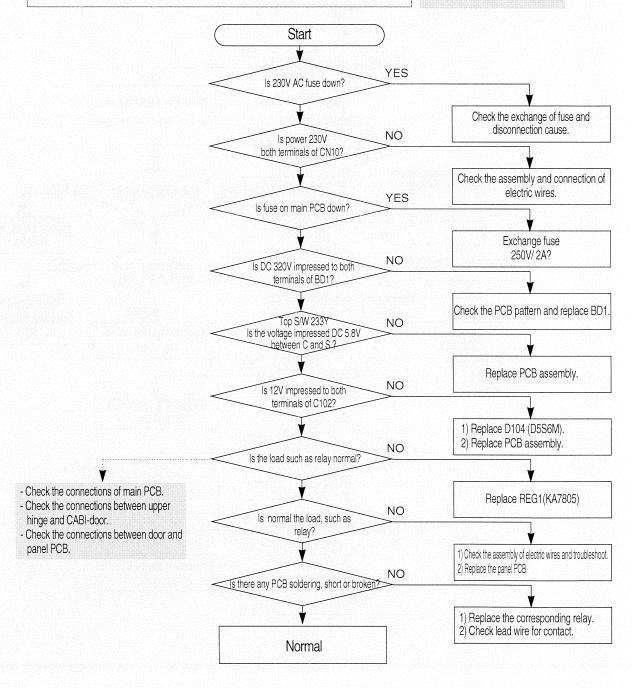

11-2) If the compressor and cooling fan motor don't work normally

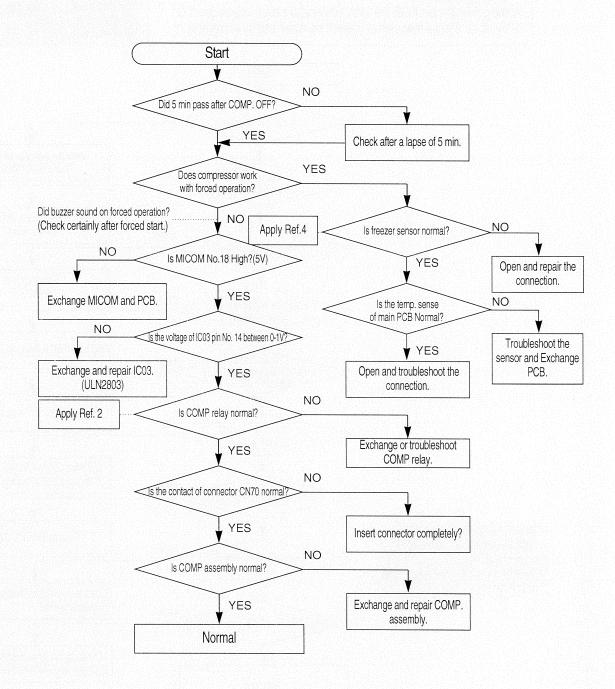


11-3) If defrost function

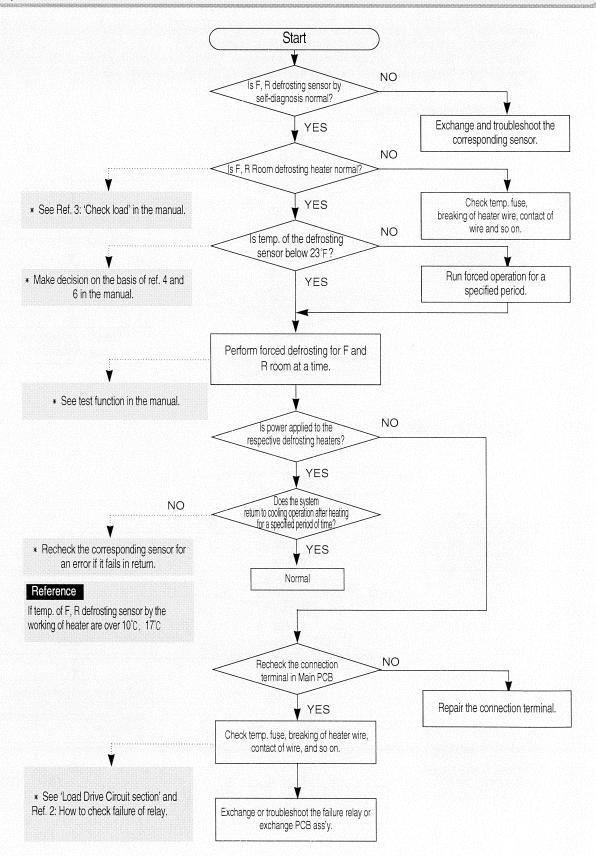


11-4) If there is a trouble with self-diagnosis

- Error of sensor can be seen on the front display of refrigerator. If power is impressed to refrigerator first, an failure of sensor is found. The refrigerator will stop working and display(blink) the region of trouble-occurred sensor repetitively.
- Even if sensor has failure during the operation, the refrigerator will not stop working but can run the normal cooling operation because of being operated in the Emergency Operation mode. Therefore you're requested to use how to check self-diagnosis in the manual.

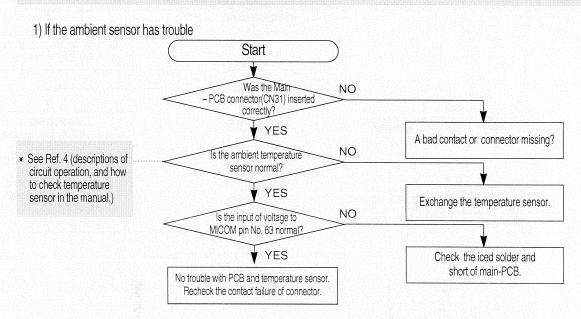


2) If the temperature sensor of F and R room has trouble

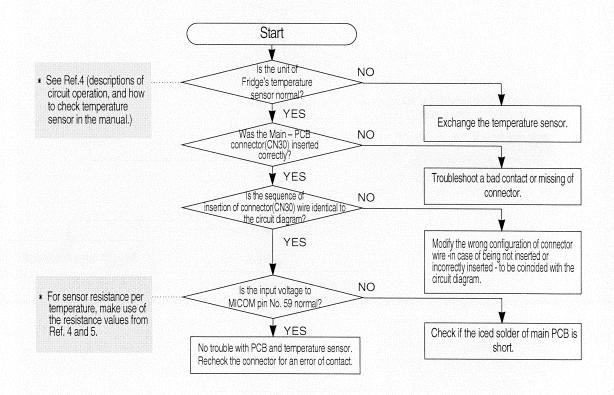


11-5) If alarm sound


1) If "Ding-Dong" sounds continuously

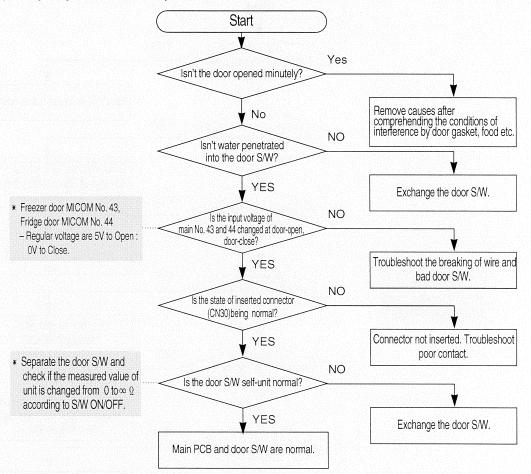

2) If "Beep" sounds continuously

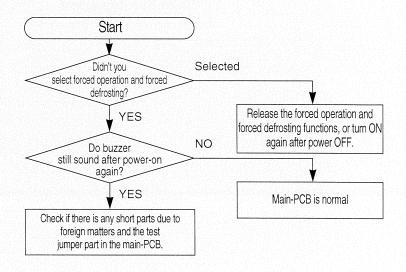


3) Without sound of buzzer operation

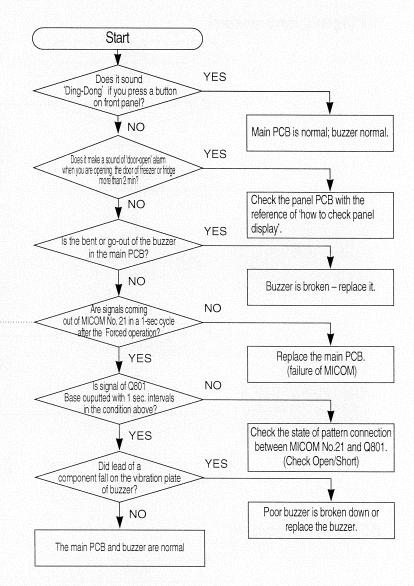

* Refer the description of Test function in the manual for the Forced operation.

11-6) If the panel PCB is not working normally:


1) Where lighting of the panel PCB is disabled, or only some lamps are disabled.

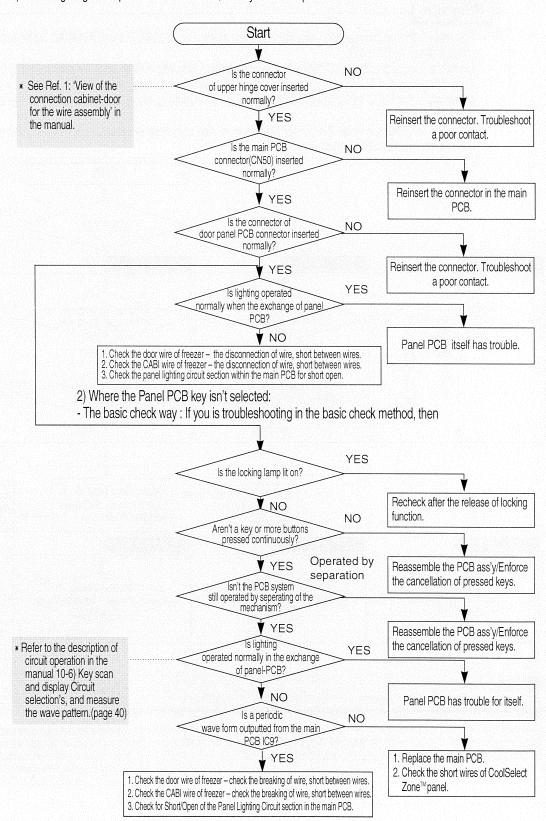

11-7) If fan doesn't work:


Reference

- The refrigerator has been applied with the BLDC fan motor. For RS2533, R room Fan is AC motor used. The BLDC motor is driven by DC 8-12V.
- Under the normal condition of COMP ON, it is operated together with F-FAN motor. With operation of the CoolSelect Zone™ function, the F-Fan motor may do not work. If the door is opened and closed once at a high ambient temperature, the BLDC motor would be operated after a 1-minute or longer delay. Therefore, you' re advised not to take it for an error.
- When the refrigerator is open, the freezer fan motor will also stop working simultaneously with the fan motor. (for the purpose of performance improvement).

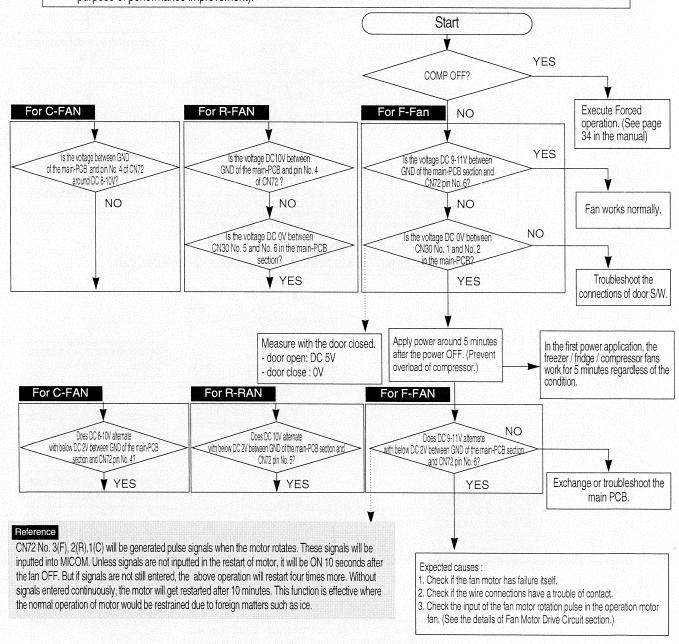


11-8) If CoolSelect Zone™ isn't operated normally

1) If the lamp of CoolSelect Zone™ is not lit.

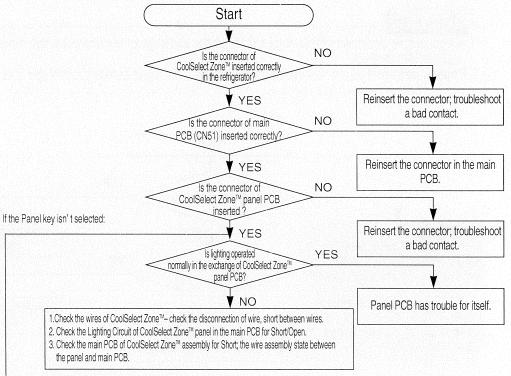


- 2) If the Panel PCB key isn't selected:
 - The basic method is applied to check if you fail in troubleshooting after above the execution, then

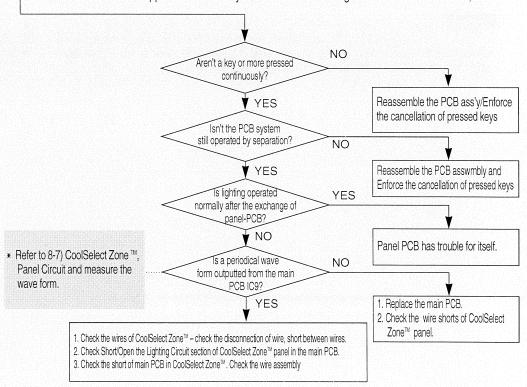

11-9) If the lamps of freezer / refrigerator does not light.

- 1. When you are exchanging the lamp of freezer, please exchange or troubleshoot it with the power OFF to avoid an electric shock.
- 2. Please keep in mind you do not get burnt by the excessive heating of an incandescent light bulb.

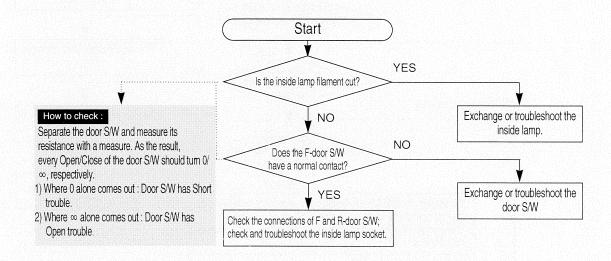


Reference

If the door is opened, then the contact of door S/W is opened and MICOM gets applied 5V to finally sense Open. If 5V has been sensed over two minutes afterwards, then an Door-Open alarm will sound 'Ding-Dong' for 10 seconds in a one-minute cycle. For that reason, if the door S/W has failure, the refrigerator can make a "Ding-Dong" sound per a one-minute cycle. Please note step for its service!


11-10) If the solenoid in the ice-chute cover doesn't work:

Preliminary check

- 1) Check if the solenoid is unconditionally operated for 0.3 sec, independent of the Open/Close condition of cover ice-route, after a lapse of about 5 seconds from power ON. (Before installation, the cancellation of cover ice-route open is enabled.)
- 2) Check if the connector in upper hinge section is hook-up correctly.

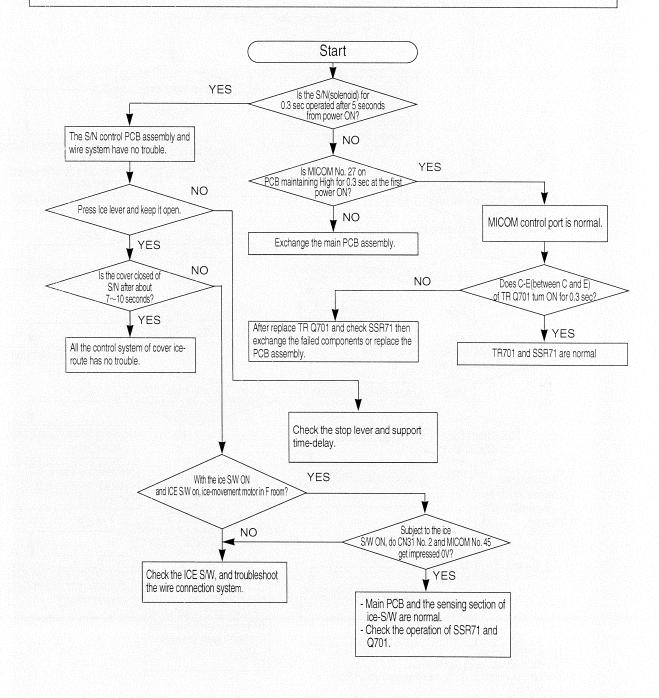


11-11) If Crushed Ice/Cubed Ice doesn't work properly:

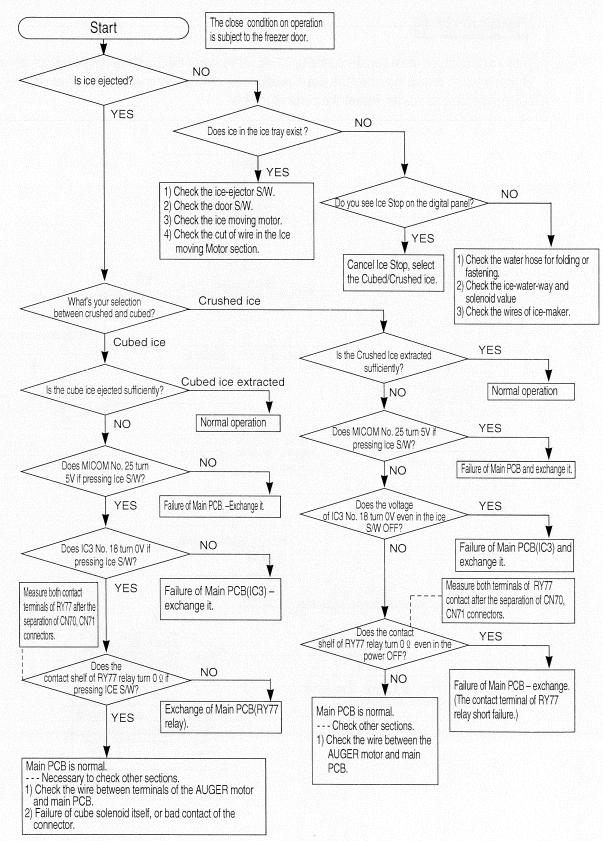

Appendix I (Reference for circuit diagnostics)

Ref. 1) Check sensors

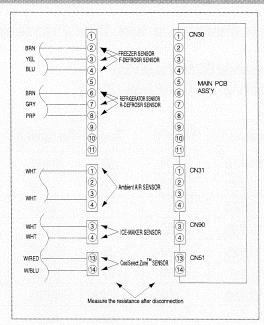


Disconnect the connector from the Main PCB. than measure the resistance of the following sensors.

- 1. Check the resistance the Freezer sensor cn30 between the no. 2 and 3.
- 2. Check the resistance the Fridge Room sensor cn30 between the no. 6 and 7.
- 3. Check the resistance the F Defrosting sensor cn30 between the no. 2 and 4.

- 4. Check the resistance the R Defrosting sensor cn30 between the no. 6 and 8. 5. Check the resistance between the no. ① and ④ the ambient Air sensor cn31. 6. Check the resistance between the no. ③ and ④ of the Ice-Maker sensor cn90. 7. Check the resistance between the no. ③ and ④ of the CoolSelect Zone™
- sensor cn51.
- 8. Decide the sensor by comparing above resistances to the temperature of each sensor with the conversion table of sensor resistance and voltage from the reference temperature of Ref. 6 on this manual.
- * When the resistance is $\infty \Omega$ or 0Ω , check the connection of electric wire and sensorconnector.

Ref. 2) Check Door S/W

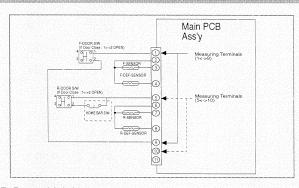

Check with power applied.

The Door S/W is a two-contact switch. One detects Door Open/Close with DC 5V at the PCB and the other one turns on/off the room light.

(R-Room Light)

1. Check if the light comes on by opening the R-Door. If it lights up, check if the light goes off by pressing down the Door S/W with the door open. If there is any problem, check the R-Door S/W.

(R-Door Open Sensing Part of MAIN PCB)

1. Place the positive(+) terminal on CN30 No. 5 and the negative(-) on No. 6. And, check the voltage.

2. When the voltage is DC 5V with the door open, it is normal.

3. When the voltage is DC 0V with the door closed, it is normal. If there is any problem, check the Door S/W and the wire connections.

(F-Room Light)

1. Check if the light comes on by opening the F-Door. If it lights up, check if the light goes off by pressing down the Door S/W with the door open. If there is any problem, check the F-Door S/W.

(F-Door Open Sensing Part of MAIN PCB)

1. Place the positive(+) terminal on CN30 No.(1) and the negative(-) on No.(9). And checkthe voltage.

2. When the voltage is DC 5V with the door open, it is normal.

3. When the voltage is DC 0V with the door closed, it is normal. If there is any problem, check the Door S/W and the wire connections.

Appendix I (Reference for circuit diagnostics)

Ref. 3) Table of temperature sensor according to resistance and voltage conversion.

The input voltage to the MICOM PORT could be different by a hardware. This is a table based on the voltage using the 10kohm-F.

MICOM PORT voltage when the sensor is open: about DC 5V(Vcc LEVEL)

MICOM PORT voltage when the sensor is shorted: about DC 0V(Ground LEVEL)

Temp.(°F)	Resistance(似)	Voltage(V)
-43.6	98.870	4.541
-41.8	93.700	4.518
-40.0	88.850	4.494
-38.2	84.150	4.469
-36.4	79.800	4.443
-34.6	75.670	4.416
-32.8	71.800	4.389
-31	68.150	4.360
-29.2	64.710	4.331
-27.4	61.480	4.301
-25.6	58.430	4.269
-23.8	55.550	4.237
-22.0	52.840	4.204
-20.2	50.230	4.170
-18.4	47.770	4.134
16.6	45.450	4.098
-14.8	43.260	4.061
-13.0	41.190	4.023
-11.2	39.240	3.985
-9.4	37.390	3.945
-7.6	35.650	3.905
-5.8	33.990	3.863
-4.0	32.430	3.822
-2.2	30.920	3.778
-0.4	29.500	3.734
1.4	28.140	3.689
3.2	26.870	3.644
5.0	25.650	3.597
6.8	24.510	3.551
8.6	23.420	3.504
10.4	22.390	3.456

Temp.(°F)	Resistance(เ\)	Voltage(V)	
12.2	21.410	3.408	
14.0	20.480	3.360	
15.8	19.580	3.310	
17.6	18.730	3.260	
19.4	17.920	3.209	
21.2	17.160	3.159	
23.0	16.430	3.108	
24.8	15.740	3.057	
26.6	15.080	3.006	
28.4	14.450	2.955	
30.2	13.860	2.904	
32.0	13.290	2.853	
33.8	12.740	2.801	
35.6	12.220	2.750	
37.4	11.720	2.698	
39.2	11.250	2.647	
41.0	10.800	2.596	
42.8	10.370	2.545	
44.6	9.959	2.495	
46.4	9.569	2.445	
48.2	9.195	2.395	
50.0	8.839	2.346	
51.8	8.494	2.296	
53.6	8.166	2.248	
55.4	7.852	2.199	
57.2	7.552	2.151	
59.0	7.266	2.104	
60.8	6.992	2.057	
62.6	6.731	2.012	
64.4	6.481	1.966	
66.2	6.242	1.922	

Temp.(°F)	Resistance(10)	Voltage(V)	
68.0	6.013	1.878	
69.8	5.792	1.834	
71.6	5.581	1.791	
73.4	5.379	1.749	
75.2	5.185	1.707	
77.0	5.000	1.667	
78.8	4.821	1.626	
80.6	4.650	1.587	
82.4	4.487	1.549	
84.2	4.329	1.511	
86.0	4.179	1.474	
87.8	4.033	1.437	
89.6	3.894	1.401	
91.4	3.760	1.366	
93.2	3.631	1.332	
95.0	3.508	1.298	
96.8	3.390	1.266	
98.6	3.276	1.234	
100.4	3.167	1.203	
102.2	3.062	1.172	
104.0	2.962	1.143	
105.8	2.864	1.113	
107.6	2.770	1.085	
109.4	2.680	1.057	
111.2	2.593	1.030	
113.0	2.510	1.003	
114.8	2.429	0.977	
116.6	2.352	0.952	
118.4	2.278	0.928	
120.2	2.206	0.904	


Appendix I (Reference for circuit diagnostics)

Ref. 4) Service part lists of each circuit board.

NO	CODE-NO	PART NAME	SPECIFCATION	Q'TY	
1	DA41-00195A	MAIN PCB ASS'Y	①Basic ②Basic with H/B	1	
2	DA41-00195B	MAIN PCB ASS'Y	①Basic with CoolSelectZone™	1	
3	DA41-00185A	MAIN PCB ASS'Y	①Dispenser ②Dispenser with H/B	1	
4	DA41-00185B	MAIN PCB ASS'Y	① Dispenser with CoolSelectZone™ ② Dispenser with H/B & CoolSelectZone™	1	
5	DA41-00103T	MAIN PCB ASS'Y	①Basic ②Basic with H/B	1	
6	DA41-00103U	MAIN PCB ASS'Y	①Basic with CoolSelectZone™	1	
7	DA41-00173A	MAIN PCB ASS'Y	①Dispenser ②Dispenser with H/B	1	
8	DA41-00173B	PANEL PCB ASS'Y	① Dispenser with CoolSelectZone™ ② Dispenser with H/B & CoolSelectZone™		
9	DA41-00108A	CoolSelectZone™ PCB ASS'Y	 ①Basic with CoolSelectZone™ ②Dispenser with CoolSelectZone™ ③Dispenser with H/B & CoolSelectZone™ 		
10	DA32-00006B	R-DEFROST Sensor	PX-41C	1	
11	DA32-00006A	F-DEFROST Sensor	PX-41C	1	
12	DA32-10109V	Ambient Temp.Sensor	PX-41C	1	
13	DA32-00105U	R-Temp.Sensor	PX-41C	4	
10	DA32-001030 F	F-Temp.Sensor	PX-41C (Use Only Basic Models)	1	
14	DA32-10109W	F-Temp.Sensor	PX-41C (Use Only Dispenser Models)	1	
15	DA32-10109X	CoolSelectZone™ PCB ASS'Y	PX-41C		
16	3301-000016	FERRIETE CORE (LOCK TYPE)	•	penice micacie)	
17	DA27-00002A	NOISE FILTER	USE ALL MODEL	1	


^{*} The last no. of the code number such as DA41-xxxxx? for the Main PCB-ASS'Y could be changed by MICOM and option.

For Basic Models

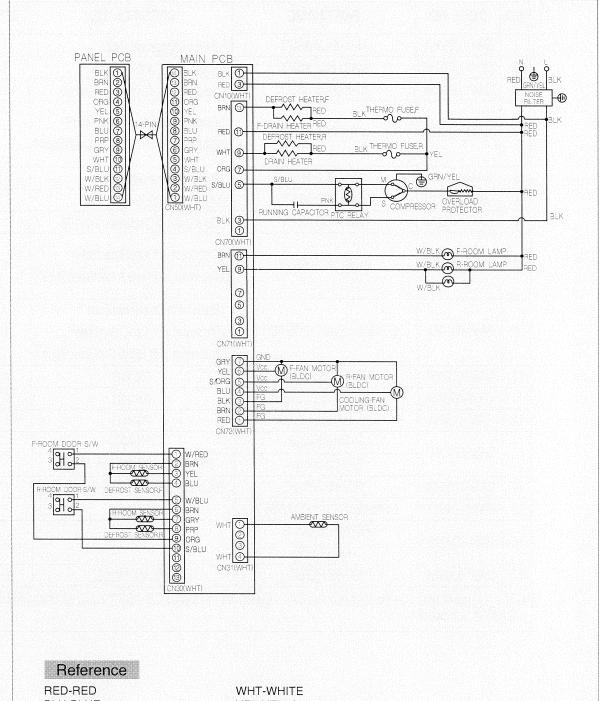

RED-RED BLU-BLUE ORG-ORANGE P/BLU-PINK/BLUE BRN-BROWN PNK-PINK GRY-GRAY W/BLU-WHITE/BLUE


For Dispenser Models

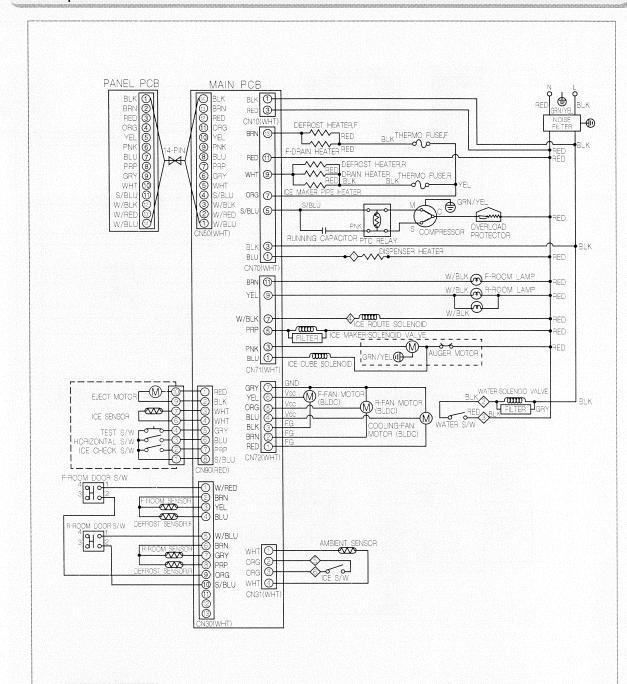

Reference

RED-RED BLU-BLUE ORG-ORANGE P/BLU-PINK/BLUE BRN-BROWN PNK-PINK GRY-GRAY W/BLU-WHITE/BLUE


For Dispenser & CoolSelect Zone™ Models

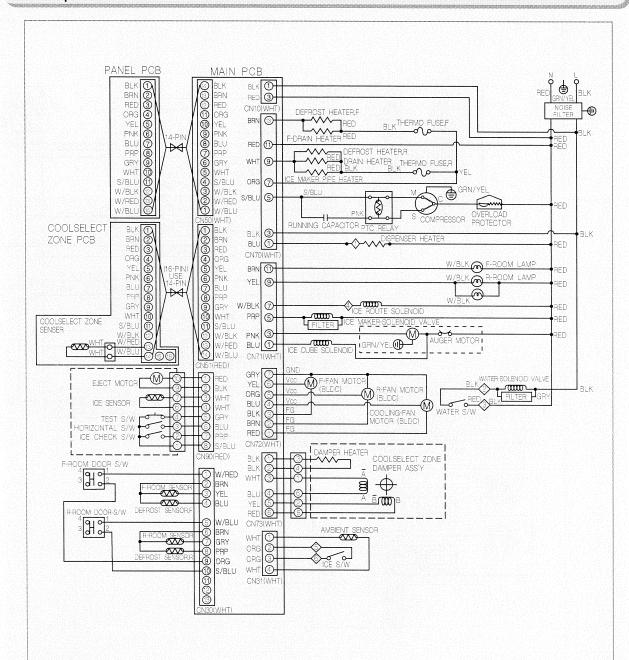

Reference

RED-RED
BLU-BLUE
ORG-ORANGE
P/BLU-PINK/BLUE
BRN-BROWN
PNK-PINK
GRY-GRAY
W/BLU-WHITE/BLUE


For Dispenser & Home Bar Models

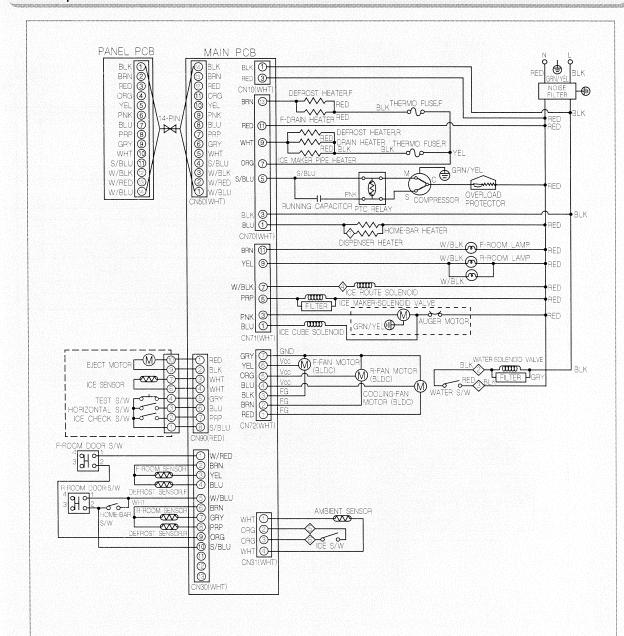

Reference

RED-RED
BLU-BLUE
ORG-ORANGE
P/BLU-PINK/BLUE
BRN-BROWN
PNK-PINK
GRY-GRAY
W/BLU-WHITE/BLUE

For Dispenser & Home Bar & CoolSelect Zone™ Models

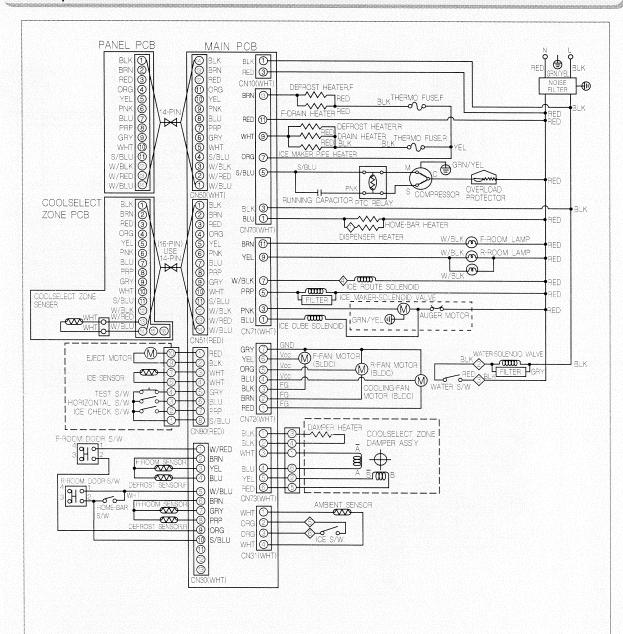


Reference

RED-RED BLU-BLUE ORG-ORANGE P/BLU-PINK/BLUE BRN-BROWN PNK-PINK GRY-GRAY W/BLU-WHITE/BLUE

12 . Illustrated Parts Catalog.

12-1) Freezer Room Exploded View

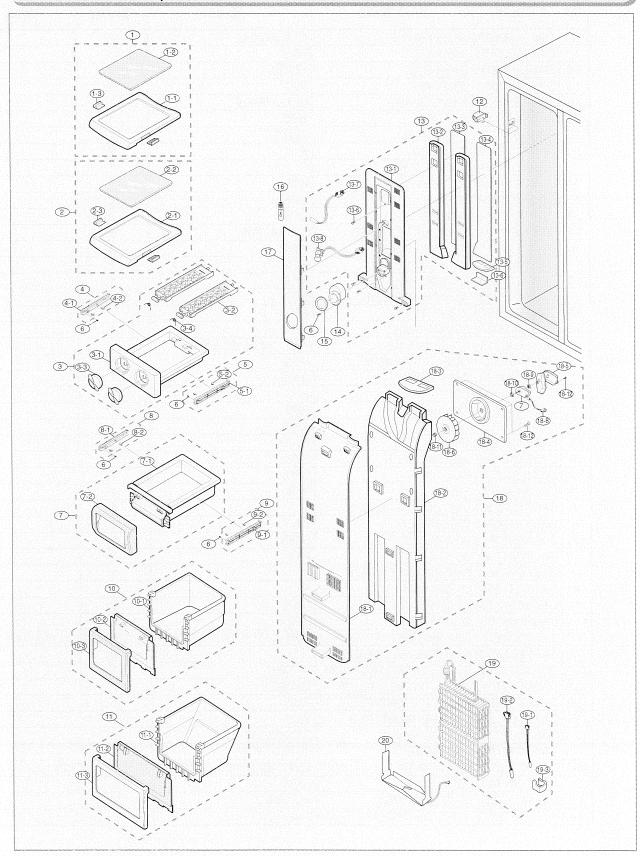

Illustrated Parts Catalog.


■ Parts List of Freezer

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	DA97-00962A	SHELF-FRE ASSY	GLASS-SHELF	2	
1-1	DA67-00175B	SHELF-FRE	HIPS	1	
1-2	DA67-00177B	SHELF GLASS	GLASS	1	
1-3	DA64-00090A	TRIM-SHELF	PVC	2	
2	DA67-01932B	SHELF-FRE ASSY	GLASS-SHELF	1	
2-1	DA67-00146B	SHELF-FRE	HIPS	1	
2-2	DA67-00177E	SHELF GLASS	GLASS	1	
2-3	DA64-00090A	TRIM-SHELF	PVC	2	
3	DA97-01929A	TRAY-ICE ASSY		1	
3-1	DA61-01783A	FIXER-TRAY ICE	HIPS	1	
3-2	DA63-02169A	TRAY-ICE	HIPS	2	
3-3	DA64-00084B		HIPS	2	
3-4		SPRING ETC-ICE MAKER	STS304, PI10	2	
4		ASSY RAIL-BASKET,L	HIPS	2	
4-1	DA61-00044C		HIPS	1 1	
4-2	DA63-00202A		NY-6	1	
5	DA97-01292B		HIPS	2	
5-1	DA61-00045C		HIPS	1	
5-2	DA63-00202A		NY-6	1	
6	6002-000215		TH,+,1,M4.0,L16,ZPC(YEL)		
7	DA97-01930A		HIPS	1	
7-1	DA67-00155A	CASE-TRAY ICE	GPPS	1	
7-2	DA63-00179B	COVER-TRAY	HIPS	1	
8	DA97-01247B	ASSY RAIL LOW,L	HIPS	1	
8-1			GPPS	1	
8-2		GROMMET-RAIL	NY-6	1	
9	DA97-01248B		HIPS	1	
9-1	DA61-60180B		HIPS	1	
9-2	DA63-40256B		NY-6	$-\frac{1}{1}$	
10	DA97-00425C		1141 0	- i 1	
10-1	DA61-01785A		PP	1 1	
10-2		COVER-FRONT FRE,B	GPPS	1 1	
10-3			HIPS	1 1	
11		CASE-BASKET LOW ASSY	THES	1	
	DA61-01784A		PP	1	
11-2		COVER-FRONT FRE,B	GPPS	1 1	
11-3			HIPS	1 1	
12	DA34-10120A		PA6	1	
13		ASSY COVER-MULTI FRE	FAO	1	
13-1	DA63-00154B		UPP PP		
13-1 13-2			FOAM-PS	1	
13-2 13-3			T2.0	1	
13-3 13-4		SEAL EVAP-FRONT FRE,L SEAL EVAP-FRONT,FRE R	T2.0		
				1	
	DA62-00219A		OJC-3000 , T7	1	
		PLATE-INS,DUCT	RD-PVC , T1.2	2	
13-7			502AT, -10~35 , 5V	1	
14	DA63-00178A		GPPS ARG PNGG	2	
15		COVER SENSOR-B LAMP-INCANDESCENT	ABS , PNC2 240V , 30W	3	

■ Parts List of Freezer

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
17	DA63-00364A	COVER LAMP-FRE,A	PP	1	
18	DA97-00360Z	ASSY COVER EVAP-FRE	BLDC	1	
18-1		COVER EVAP-FRE(FRONT LOW)	PP	1	
18-2	DA62-00186A	INSULATION DUCT-FRE	FOAM-PS	1	
		SEAL-AIR FRE LOW	OJC-3000, T5	1	
	DA61-00417A		ABS SCRAP	1	
	DA63-00713A		PP	1	
	DA35-00053A		ABS	1	
		MOTOR DC-BLDC, SENSOR	DREP3020LA	1	
		WIRE HARNESS-MOTOR		1	
		GROMMET-MOTOR	NBR	2	
	6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,STS304	2	
	DA61-20128A	SPRING ETC-FAN	STS27, PI7.8, ID1.0	1	
	DA96-00090B		230V	1	
	DA32-00006B		PX-41C RD SEN,A TOP,-10°C	1	
		THERMO FUSE-ASSY	SW-102T, 250V	1	
	DA61-00603A		PP	1	
20	DA97-00339B	ASSY-PLATE DRAIN,FRE	230V , 41W	1	

12-2) Refrigerator Room Exploded View (RS21N, RS21H, RS21D, RS21F, RS23N, RS23H, RS23D, RS23F)

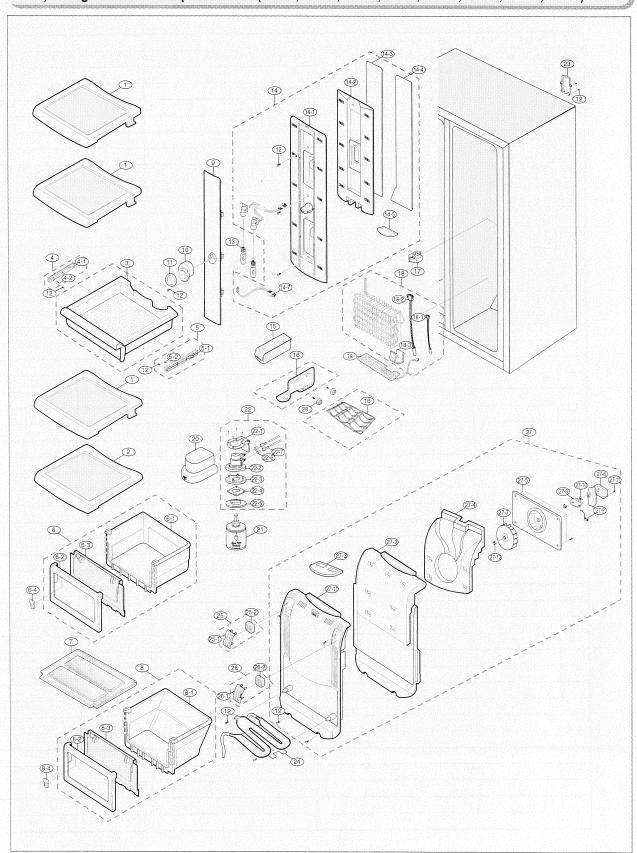


■ Parts List of Refrigerator

10 N	CODE-NO	PART NAME	Spec	Quantity	Remark
1	DA67-00149B	SHELF-REF UPP	GLASS	3	
2	DA67-00148D	SHELF REF-LOW	GLASS	1	
3	DA66-00038B	TRAY-CHIL ROOM	GPPS	1 1	
4	DA97-01247B	ASSY RAIL LOW,L	HIPS	1 1	
4-1	DA61-60179B		HIPS	1 1	
4-2	DA63-40256B	GROMMET-RAIL	NY-6	1 1	
5	DA97-01248B	ASSY RAIL LOW,R	HIPS	1 1	
5-1	DA61-60180B	RAIL-LOW	HIPS	1 1	
5-2	DA63-40256B	GROMMET-RAIL	NY-6	1 1	
6	DA97-00423B	CASE-VEG UPP ASSY	HIPS	1 1	
6-1	DA61-01787A	CASE-VEG	PP	1	
6-2	DA63-00177C	COVER-FRONT REF,B	GPPS	1 1	
6-3		COVER-FRONT	HIPS	1	
6-4		KNOB-MOIS CONT	ABS	1	
7		COVER-VEG,LOW	HIPS	2	
8		CASE-VEG LOW ASSY	HIPS	1 1	
8-1	DA61-01786A		PP	1 1	
8-2	DA63-00177C	COVER-FRONT REF,B	GPPS	1 1	
8-3		COVER-FRONT	HIPS	1 1	
8-4		KNOB-MOIS CONT	ABS	1 1	
9	DA63-01638A	COVER-LAMP REF	PP	1	
10	DA63-00178A	COVER-SENSOR	GPPS	2	
11	DA63-00162B	COVER SENSOR-B	ABS , PNC2	2	
12	6002-000215	SCREW-TAPPING	TH,+,1,M4.0,L16,ZPC(YEL)	15	
13	4713-001132	LAMP-INCANDESCENT	240V , 30W	3	
14	DA97-01420B		2.00,100.1	1	
14-1	DA63-00158B	COVER-MULTI	PP	1	
14-2	DA72-00144A	INSULATION	FOAM-PS	1 1	
14-3		SEAL-MULTI REAR,L	T2.0	1 1	
14-4		SEAL-MULTI REAR,R	T2.0	1	
14-5		SEAL-MULTI AL,UPP	FOAM-PE + AL50um	1	
		LAMP HOLDER	E 14,250V,1A,370,NTR,PBT 5VA	1 1	
14-7		SENSOR-ASSY	502AT,K-PJT,-10~35,5V,5KOHM	1 1	
15	DA67-40250E	TRAY-UTILITY	GPPS	1 1	
16	DA67-00711A		MSWR10	1 1	
16	DA67-00145B		HIPS	1	
17		SWITCH-DOOR	125/1.5A	1	
18		ASSY EVAP-REF	230V , 110W	1	
18-1	DA30-0001311	SENSOR ASSY	PX-41C RD SEN,A TOP,-10°C	1 1	
18-2	DA32-00000B	THERMO FUSE-ASSY	SW-102T,250V	1	
18-3	DA47-101483	FIXER-SENSOR	PP	1	
19	DA47-00039B		240V		
20	DA97-00039B		ABS	1	
۷۷	DA97-00724C		ADO	4	
21	DA29-00003A DA97-00725C		A TOD EVD INCEDT FILTED	1 1	
21		ASSY CASE-FILTER	A-TOP,EXP,INSERT-FILTER	1 1	
22		COVED TUDE OUTED	IDD		
	DA63-00586A	COVER-TUBE FILTER	PP	1 1	

■ Parts List of Refrigerator

10	CODE-NO	PART NAME	Spec	Quantity	Remark
24	DA97-00670D	TANK WATER-ASSY	HD-PE	1	
25	DA97-01487E	ASSY-COVER PURIFIER,L		1	
5-1	DA63-00163H	COVER-PURIFIER L	ABS		
5-2	DA02-90106K	CATALYST-LTC	SS400-10-3		
26	DA97-01486E	ASSY-COVER PURIFIER,R		1	
6-1	DA63-00164H	COVER-PURIFIER R	ABS		
6-2		CATALYST-LTC	SS400-10-3		
27	DA97-00092N	COVER EVAP-REF ASSY		1	
7-1	DA63-00159F	COVER EVAP-REF	PP	1	
7-2	DA72-00142A	INSULATION-DUCT	FOAM-PS	1	
		SEAL-AIR,REF UPP	OJC-3000, T5	1	
		INSULATION-DUCT	FOAM-PS	1	1,413
	DA61-00417A		ABS	1	
	DA63-01809A		PP	1	
7-7	DA31-00016A		-,ET-PJT,-,-,-,12,Ø95,Ø63.	1	il din
7-8	DA31-00020E	MOTOR DC-BLDC	DREP3020LA,ET,0.245	1	
		WIRE HARNESS-MOTOR	ET-PJT,-,-,-,L450,-,-	1	
		GROMMET-MOTOR	NBR	2	
	6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,PASS,STS304	1	
		SPRING ETC-FAN	STS27, PI7.8, ID1.0	1	
28	DA61-01797A		ABS	2	

12-3) Refrigerator Room Exploded View (RS21J, RS21K, RS23J, RS23K)

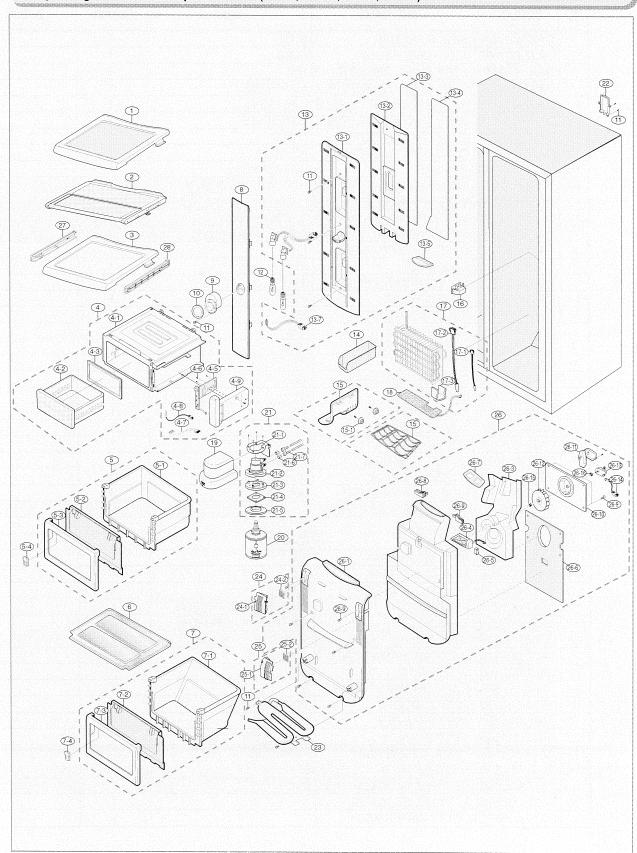


■ Parts List of Refrigerator

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	DA67-00149B	SHELF-REF UPP	GLASS	1	
2	DA97-00199R	ASSY SHELF-FOLD	GLASS	1	
3	DA97-01454B	ASSY SHELF REF-LOW	HIPS	1	
4	DA97-01413C	ASSY CASE-CONVERTIBLE	CONVERTIBLE	1	
4-1	DA97-01412B	ASSY CASE-CONVERTIBLE, SUB	CONVERTIBLE	1	
4-2	DA97-01411B	ASSY TRAY-CONVERTIBLE	CONVERTIBLE	1	
4-3	DA63-01783A	GASKET-CONVERTIBLE	SF-PVC	1	
4-4	DA61-01207A	CASE-CONTROL CONV	ABS-SCRAP	1	
4-5	DA41-00108A	PBA SUB	CONVERTIBLE	1	
4-6	6002-000462		PH,+,2,M3.0,L10,ZPC(YEL),M	5	
4-7	DA39-00215A	WIRE HARNESS		1	
4-8		SENSOR ASSY	5V, CONVERTIBLE	1	
4-9		SCREW-SPECIAL	STS304,-,PWH,+,M4,L15.5	2	
5		CASE-VEG UPP ASSY		1	
5-1	DA61-01787A		HIPS	1	
5-2		COVER-FRONT REF,B	GPPS	1	
5-3	DA63-00175C	COVER-FRONT	HIPS	1	
5-4	DA64-00085B	KNOB-MOIS CONT	ABS	1	
6		COVER-VEG,LOW	HIPS	2	
7	DA97-00422C	CASE-VEG LOW ASSY	GPPS	1	
7-1	DA61-01786A	CASE-VEG	PP	1	
7-2	DA63-00177C	COVER-FRONT REF,B	ABS	1	
7-3	DA63-00175D	COVER-FRONT	PP	1	
7-4	DA64-00085B	KNOB-MOIS CONT	ABS	1	
8	DA63-01638A	COVER-LAMP REF	PP	1	
9	DA63-00178A	COVER-SENSOR	GPPS	2	
10	DA63-00162B	COVER SENSOR-B	ABS, PNC2	2	
11	6002-000215	SCREW-TAPPING	TH,+,1,M4.0,L16,ZPC(YEL)	15	
12	4713-001132	LAMP-INCANDESCENT	240V, 30W	3	
13	DA97-01420B	ASSY COVER-MULTI REF		1	
13-1	DA63-00158B	COVER-MULTI	PP	1	
13-2	DA72-00144A	INSULATION	FOAM-PE	1	
13-3	DA62-00566A	SEAL-MULTI REAR,L	T2.0	1	
		SEAL-MULTI REAR,R	T2.0	1	
13-5	DA62-00587A	SEAL-MULTI AL,UPP	POAM-PE	1	Andrew Control of the
13-6	DA47-00025H	LAMP HOLDER	E 14,250V,1A,370,NTR,PBT 5VA	1	
13-7		SENSOR-ASSY	502AT,K-PJT,-10~35,5V,5KOHM	1	
14	DA67-40250E	TRAY-UTILITY	GPPS	1	
15	DA67-00711A	SHELF WIRE-WINE, RACK	MSWR10	1	
15	DA67-00145B	SHELF-WINE	HIPS		
15-1	DA61-01797A	FIXER-GROMMET DOOR	ABS	2	
16	DA34-10110B	SWITCH-DOOR	-,125/1.5A.25,-,-,-,WHT,-,-	1	
17	DA96-00013H	ASSY EVAP-REF	230V , 110W	1	
17-1	DA32-00006B	SENSOR ASSY	PX-41C RD SEN , -10°C ~	1	
17-2	DA47-10148J	THERMO FUSE-ASSY	SW-102T,250V	1	
17-3	DA61-00453A	FIXER-SENSOR	PP	1 1	
18	DA47-00039B	HEATER-DRAIN ASSY,REF	240V	1 1	
19		ASSY-COVER FILTER	1,1000	1	
20	DA29-00003A	FILTER-WATER ASS'Y		1	

■ Parts List of Refrigerator

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
21		ASSY CASE-FILTER		1 1	
22	DA63-00586A	COVER-TUBE FILTER	PP	1 1	
23	DA74-00056F	TANK WATER-ASSY	HD-PE	1 1	
24	DA97-01487E	ASSY-COVER PURIFIER,L		1 1	
24-1	DA63-00163H	COVER-PURIFIER L	ABS		
24-2	DA02-90106K	CATALYST-LTC	SS400-10-3		
25	DA97-01486E	ASSY-COVER PURIFIER,R		1 1	
25-1	DA63-00164H		ABS		
25-2	DA02-90106K	CATALYST-LTC	SS400-10-3		
26	DA97-01419C	ASSY COVER-EVAP REF		1	
26-1	DA63-01636B	COVER-EVAP REF	PP	1	
26-2	DA62-00505A	INSULATION DUCT-REF,A	FOAM-PS	1	
26-3	DA62-00506A	INSULATION DUCT-REF,B	FOAM-PS	1 1	
26-4		MOTOR-DAMPER	NSBA001TA1,AT-PJT,MAX 60MA	1 1	
26-5		FIXER-AIR GUIDE	PP	1	
26-6		SEAL-COVER EVAP	FOAM-PE + AL(30um)	1 1	
26-7	DA62-00568A	SEAL-AIR REF,UPP	OJC-3000 , T5	1 1	
26-8	DA62-00614A	SEAL CUTT FOAM,LEX	SPONGE, T5	1 1	
26-9	6002-000215	SCREW-TAPPING	TH,+,1,M4.0,L16,ZPC(YEL),M	4	
6-10	DA61-00417A	CASE MOTOR	ABS-SCRAP	1 1	
6-11		COVER-MOTOR	PP	1 1	
6-12	DA31-00016A	FAN-CIRCUIT		1 1	
6-13		MOTOR DC-BLDC(SENSOR)	DREP3020LB,AT(F,R)	1 1	
6-14		WIRE HARNESS-MOTOR		1 1	
6-15		SPRING ETC-FAN	STS27 , PI7.8 ,ID1.0	1 1	
6-16		GROMMET-MOTOR,BLDC	NBR	2	
27	DA61-01205B	SUPPORT-SHELF REF,L	HIPS	1 1	
28	DA61-01206B	SUPPORT-SHELF REF,R	HIPS	1 1	
	B/101 01200B	COLLOCAL CHEEF THE THE	I THI O		
			Total Control of the		
				1	

12-4) Unit Exploded View (RS21N, RS21H, RS21D, RS21F, RS23N, RS23H, RS23D, RS23F)

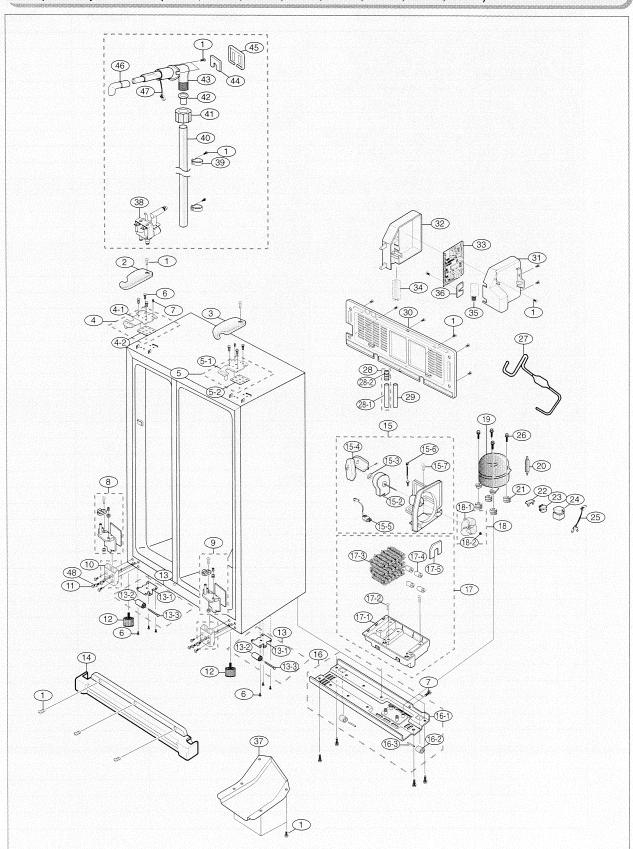


■ Parts List of Unit Exploded View

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL)	12	
2	DA63-01379B	COVER HINGE-UPP,L	ABS	1	
3	DA63-01380B	COVER HINGE-UPP,R	ABS	1	
4	DA97-01871B	ASSY HINGE-UPP,L		1	
4-1	DA61-01605B	HINGE-UPP,L	SHP1, T3.0	1 1	
4-2	DA97-01497A	ASSY-SHIM HINGE UPP	RD-PVC	1 1	
5	DA97-01872B	ASSY HINGE-UPP,R		1	
5-1	DA61-01606B	HINGE-UPP,R	SHP1, T3.0	1	
5-2	DA97-01497A	ASSY-SHIM HINGE UPP	RD-PVC	1 1	
6	DA60-10124A	SCREW-TAP TITE	M6 ,L16,HH,ZPC2	6	
7	6002-000215	SCREW-TAPPING	TH,+,1,M4.0,L16,ZPC(YEL)	2	
8	DA97-01760A	ASSY HINGE-LOW,L	T4.5, SHP1	1 1	
8-1	6003-001435	SCREW-TAPTITE	M5,L12.7,ZPC(YEL)	1 1	
8-2	6011-001442	BOLT-SOCKET	M8,L15,ZPC(BLK),SCM435	1 1	
8-3	6021-001125	NUT-HEXAGON	3,M8, P1.25,ZPC(BLK),SWRCH10	1 1	
8-4	DA61-01607A	HINGE-LOW,L	SHP1 , SM45		
8-5	DA66-00268A	CAM HINGE-RISER,UPP	NY-66(2110R)	1 1	
8-6	DA97-01494A	ASSY-SHIM HINGE LOW	T1.5, RD-PVC	1 1	
9	DA97-01763A	ASSY HINGE-LOW,R	T4.5, SHP1	1 1	
9-1	6003-001435	SCREW-TAPTITE	M5,L12.7,ZPC(YEL)	1	
9-2	6011-001442	BOLT-SOCKET	M8,L15,ZPC(BLK),SCM435	1 1	
9-3	6021-001125	NUT-HEXAGON	3,M8, P1.25,ZPC(BLK),SWRCH10	1 1	
9-4	DA61-01608A	HINGE-LOW, R	SHP1 , SM45	1 1	
9-5	DA66-00268A	CAM HINGE-RISER,UPP	NY-66(2110R)	1 1	
9-6	DA97-01494B	ASSY-SHIM HINGE LOW	T1.5, RD-PVC	1 1	
10	DA61-00317D	BRACKET-HINGE,LOW	SHP1	2	
11	6009-001255	SCREW-HEX	SWRCH18A,-,HEX-PLANGE,HEX,	M6,L8	
12	DA61-30102C	FOOT-FRONT	PP	2	
13	DA61-00056A	CASTER-FRONT ASSY	SCP1	2	
13-1	DA60-90124A	RIVET	MSWR10.OD6.0.L56.ZPC3	1 1	
13-2	DA61-40115A	CASTER-FRONT	NY-66		
13-3	DA01-40113A	REINF-CASTER-FRONT	SCP1 , T2.6	1 1	
14	DA63-00189B	COVER-LEG-FRONT	HIPP	1 1	
15				1 1	
	DA97-01283A	ASSY SUPPORT-CIRCUIT MOTOR	MOTOR	1 1	
15-1 15-2	DA61-00415A DA31-00020H	SUPPORT-CIRCUITE MOTOR	ABS SCRAP	1 1	
22.000000000000000000000000000000000000		MOTOR DC-BLDC	DRCP3030LA , 0.259A	1 1	
15-3	DA63-01146A	GROMMET-MOTOR	NBR	2	
15-4	DA63-00713A	COVER-MOTOR	PP	1 1	
15-5	DA96-00042A	ASSY-HARNESS COMP	350mm	1 1	
15-6	6501-000122	CABLE TIE	DACT-100,-,W2.5,L101.6,NTR	1 1	
15-7	6002-000480	SCREW-TAPPING	M4,L10,ZPC(YEL)	1 1	
16	DA97-00555B	ASSY CHASSIS-COMP	ODUOL TAL	1 1	
16-1	DA71-00058A	CHASSIS-COMP	SBHG1, T1.4	1 1	
16-2	DA61-40126B	CASTER-REAR	PP	2	-
16-3	DA60-90146A	PIN-CASTER	MSWR10,OD6.0,L40,ZPC2	2	
17	DA97-01285A	ASSY TRAY-DRAIN WATER		1 1	
17-1	DA66-00034A	TRAY-DRAIN WATER	200220000000000000000000000000000000000	1 1	
17-2	6009-001252	SCREW-SPECIAL	SWRCH18A,-,PH,+,M4.0,L20	4	
17-3	DA97-00259E	ASSY PIPE-SPIRAL COND	SPIRAL	1 1	

■ Parts List of Unit Exploded View

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
17-4	DA63-40128A	GROMMET-SUB COND	NBR	2	
17-5	DA62-00440A	SEAL-SUB COND	FOAM-PE, T5.0	1	
18	DA31-00010C	FAN-ASS'Y	150	1	
18-1		FAN-TURBO	ABS	1	
18-2	DA61-20128A	SPRING ETC-FAN	STS27, PI7.8, ID1.0	1	
19	MK4A5QR1U/EØ1	COMPRESSOR	15.31cc,220/240V~50Hz,RSCR	1	
20	DA73-30102B	DRYER-ASSY	CU,OD18.85,ID2,L102,10.0G	1	
21	DA63-40004A	GROMMET-COMP	NBR	4	
22	DA34-10003V	RELAY PROTECTOR O/L	4TM265RHBYY-53,	1	
23	DA35-10013B	RELAY-PTC	J531Q35E330M385-2,385V.6A	1	
24	DA63-10352A	COVER-RELAY	PP	1	
25	DA39-00084B	WIRE HARNESS COMP	-,-,EXP,-,-,-,COMP,NOTHING,	1	
26	DA60-20008A	BOLT-HEX	SM30C	4	
27		ASSY PIPE CONNECT		1	
28	DA97-00359A	ASSY TUBE-DRAIN	SOFT-PVC, T1.0, L21	1	
 28-1	DA62-20001R	TUBE PVC	SOFT-PVC, T1.0, L21	1	
28-2	DA63-00951C	GROMMET-DRAIN HOSE	NBR	1	
29	DA62-20001P	TUBE PVC	SOFT-PVC , T1.0 , L21	1	
30	DA63-00278E		SBHG1 , T0.35	1	
31	DA61-00261A	CASE PCB-PANEL	ABS	1	
32	DA63-00783A	COVER PCB-PANEL	ABS	1	
33	DA41-00195E	PBA MAIN	ET-R600a, FR-4, Basic	1	Basic Model(Vacation)
33	DA41-00185G		ET-R600a, FR-4, Dispenser only	1	Dispenser(Vacation)
33	DA41-00185H	PBA MAIN	ET-R600a, FR-4, Dispenser+Coolselect	1	Dispenser&Coolselect Zone (Vacat
34	DA27-00002A	COIL	4,+50%,-30%,38*50	1	5.500.001000000000000000000000000000000
35	2501-001186	C-OIL	5UF,350V,BK,43X55MM,15	1	
36	DA71-00155B	FIXER-MAIN PCB	RD-PVC , T1.5	1	
37	DA74-00038C	DUCT-CABI,C	ABS SCRAP	1	is .
38	DA74-40149C	VALVE WATER-ASSY	RIV-12A-4	1	
40	DA73-00070V	PIPE-WATER LINE	PB(4137), Ø6.35	1	
41	DA60-30104A	NUT-WATER LINE	NY-6	1	
42	DA71-20208A	FIXER-VALVE WATER	NY-6	1	
43	DA71-20200A	PIPE-WATER FRE,ASSY(SUB)	SUB)AL, Ø1.0	1	+
44	DA72-00228C	SEAL-WATER PIPE	FOAM-PE, T10, L80	1 1	
45	DA97-002200	ASSY COVER-PIPE WATER	240V, 7W		
46	DA97-00979A	GROMMET-TUBE WATER, FILL	IN SILICON	1 1	
47	DA47-00035A	HEATERWATER, PIPE	240V , 7W		
48	6001-000153	SCREW-TAPPING	M4 6ZPC2(YEL)	2	
	0001-000133	JOHEW-TAIT ING	WH OZFGZ(TEL)	2	

12-5) Freezer Room Exploded View (RS21D, RS21F, RS21J, RS23K, RS23D, RS23F, RS23J, RS23K)

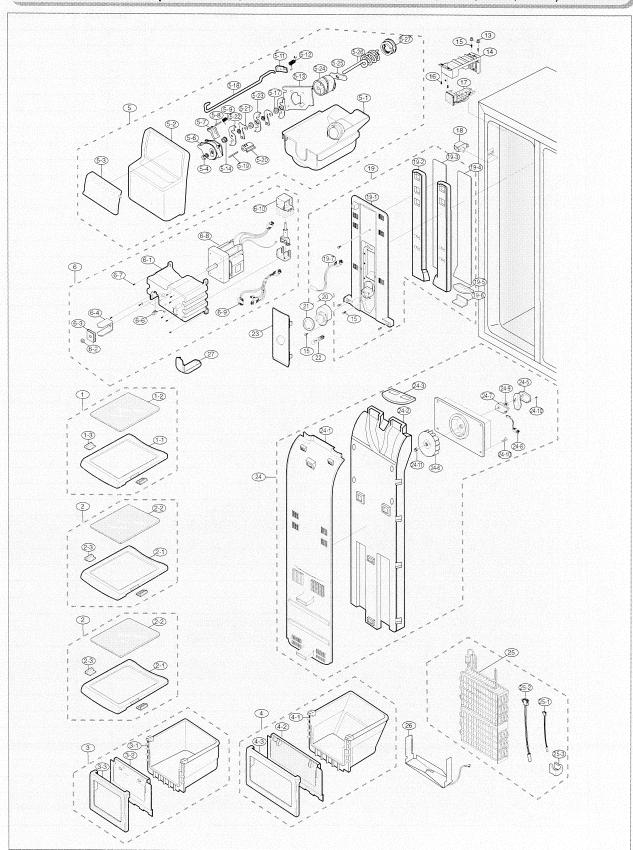


■ Part List of Freezer Room

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	DA67-00180A	SHELF-FRE ASSY	GLASS-SHELF	1	
1-1	DA67-00175B	SHELF-FRE	HIPS	1	
1-2	DA67-00177B	SHELF GLASS	GLASS	1	
1-3	DA64-00090A	TRIM-SHELF	PVC	2	
2		SHELF-FRE ASSY	GLASS-SHELF	1	
2-1	DA67-00146B		HIPS	1	
2-2	DA67-00177E		GLASS	1	
2-3	DA64-00090A	TRIM-SHELF	PVC	2	
3		CASE-BASKET UPP ASSY		1	
3-1	DA61-01785A		HIPS	1	
3-2		COVER-FRONT FRE,B	HIPS	1	
3-3	DA63-00170D		HIPS	1	
4		CASE-BASKET LOW ASSY		1	
4-1	DA61-01784A		HIPS	1	
4-2	DA63-00174C	COVER-FRONT FRE,B	HIPS	1	
4-3	DA63-00170A		HIPS	1	
5		CRUSHER ICE ASSY		1	
5-4	DA60-40116A		STS4	1	
5-2		COVER-ICE BUCKET	PP	1	
5-3		COVER-ICE BUCKET,B	GPPS	1	
5-5		COVER-CRUSHER DISP	PC	1	
5-1	DA66-00033A	TRAY-ICE		1	
6		CASE-AUGER MOTOR, ASSY		1	
6-1	DA67-00144D		ABS SCRAP	1	
6-2	DA61-20140A	SPRING ETC-SOLENOID	STS304	1	
6-3	DA71-00163A	FIXER-NUT	STS420-J2, T1, CLIP	1	
6-4	DA70-20017A	PLATE-D/AUGER DISP	STS304, L127XD14.4	1	
6-5	DA65-20107A	SADDLE-SOLENOID	NY-6	1	
6-6	DA47-40112V	LAMP HOLDER	PBT 5VA , E14	1	
6-7	6001-000033	SCREW-MACHINE	TH,+,M4,L10,-,STS304	2	
6-8	DA31-10141D		ISG-3250SSD,SR-S6586,1.8A,50	1	
6-9		WIRE HARNESS-SUB	100 0200000,011 00000,1.071,00	1	
6-10	·	VALVE-SOLENOID		1	
6-11		BUSH-SOLENOID	POM	1	
13	DA71-20252A	FIXER-GROMMET DOOR	ABS	2	
14	DA59-30103J	ICE MAKER	DC12V	1	
15	6002-000215	SCREW-TAPPING	TH,+,1,M4.0,L16,ZPC(YEL)	15	
16	6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,PASS,STS304	2	
17	DA67-40308A	TRAY-ICE	PP , T1.0	1	
18	DA34-10120A	SWITCH-DOOR	PA6	1	
19	DA97-00101L	ASSY COVER-MULTI FRE	FAU	1	
19-1	DA63-00363B	COVER EVAP-FRE, FRONT UPP	PP		
19-1	DA72-00245A	INSULATION DUCT-FRE, UPP	FOAM-PS	1 1	
19-2		SEAL EVAP-FRONT FRE,L	T2.0		
19-3 19-4	DA72-00158F		T2.0	1	
19-4 19-5		SEAL EVAP-FRONT, FRE R		1	
			OJC-3000 , T7.0	1	
19-6 10-7			RD-PVC , T1.2	2	
19-7 20	DA32-10105H DA63-00178A		502AT,K-PJT,-10~35,5V,5KOHM GPPS	1 2	

■ Part List of Freezer Room

2	4713-001132 DA63-00364A DA97-00360Z DA63-00153E DA62-00186A DA72-00227A	COVER SENSOR-B LAMP-INCANDESCENT COVER LAMP-FRE,A ASSY COVER EVAP-FRE LOW) COVER EVAP-FRE(FRONT LOW) INSULATION DUCT-FRE	ABS , PNC-2 240V , 30W PP	2 3 1	
13 [14 [14-1 [14-2 [14-3 [14-4 [14-5	DA63-00364A DA97-00360Z DA63-00153E DA62-00186A DA72-00227A	COVER LAMP-FRE,A ASSY COVER EVAP-FRE LOW) COVER EVAP-FRE(FRONT LOW)	PP	1	
14 [44 [44-14]	DA97-00360Z DA63-00153E DA62-00186A DA72-00227A	ASSY COVER EVAP-FRE LOW) COVER EVAP-FRE(FRONT LOW)			
1-1 [1-2 [1-3 [1-4 [1-5 [DA63-00153E DA62-00186A DA72-00227A	COVER EVAP-FRE(FRONT LOW)		4	
1-2 [1-3 [1-4 [1-5 [DA62-00186A DA72-00227A		55	1	
1-3 [1-4 [1-5 [DA72-00227A	INCLUATION DUCT EDE	PP	1	
1-4 I 1-5 I		INSULATION DUCT-FME	FOAM-PS	1	
1-5 I	DA61-00417A	SEAL-AIR FRE LOW	OJC-3000, T5	1	
		CASE MOTOR	ABS SCRAP	1	
	DA63-00713A	COVER-MOTOR	PP	1	
+-0 1	DA31-00038A	FAN-CIRCUIT	ABS	1	
4-7 I	DA31-00020E	MOTOR DC-BLDC, SENSOR	DREP3020LA,ET,0.245	1	
		WIRE HARNESS-MOTOR	F-FAN	1	
		GROMMET-MOTOR	NBR, ID6.5, OD42	2	
		SCREW-TAPPING	TH,+,1,M4,L12,PASS,STS304	2	
		SPRING ETC-FAN	STS27, PI7.8, ID1.0	1	
		ASSY EVAP-FRE	230V	1	
	DA32-00006B		PX-41C RD SEN,A TOP,-10°C~	1	
	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	THERMO FUSE-ASSY	SW-102T , 250V	1	
200000000000000000000000000000000000000	DA61-00603A		PP	1	and the second
		ASSY-PLATE DRAIN,FRE	230V , 41W	1	
	DA63-00157A		GPPS	1	


### 12-6) Freezer Room Door Exploded View

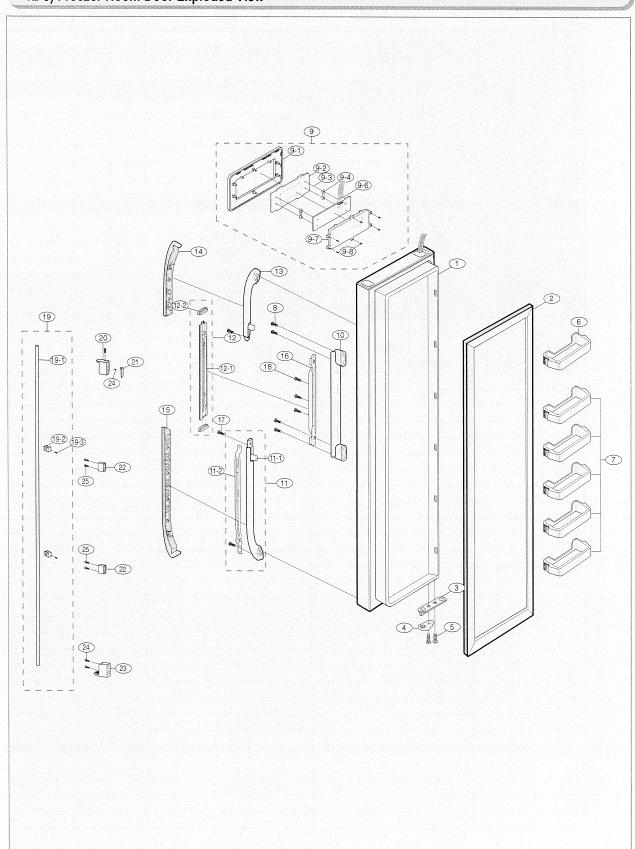

#### ■ Part List of Freezer Room Door Exploded View

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	-	ASSY DOOR FOAM FRE		1	
2	DA97-01800A	GASKET DOOR-FRE ASSY	SF-PVC	1	
3	DA61-00776A	STOPPER DOOR	SHP1, T3.0	1	
4	DA66-90112C	CAM HINGE-RISER,LOW	NY-66	1	
5	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
6	DA63-01863F	GUARD-FRE,UPP	PP	1	
7	DA63-01864A	GUARD BOTTLE-FRE LOW	PP	5	
8	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
9	DA97-02144A	ASSY-COVER-CONTROL		1	
9-1	DA63-00971A	COVER-CONTROL FRONT	ABS, SNOW-WHITE	1	
9-2	DA63-02189A	COVER-CONTROL BASIC	GPPS	1	
9-4	DA61-01818A	SUPT-KNOB TOUCH,BASIC	SILICONE	2	
9-6	DA41-00174A	PBA PANEL	1.6*190*70	1	
9-7	DA63-00970A	COVER-PCB REAR	ABS , SNOW-WHITE SCRAP	1	
9-8	6002-000466	SCREW-TAPPING	PH,+,2S,M3.O,L8,ZPC(YEL)	4	
10	DA64-01017A	HANDLE BASE-MID	HIPP, SNOW-WHITE	1	
11	DA97-02141A	HANDLE-LOW-ASSY	ABS, SNOW-WHITE	1	
11-1	DA64-01018A	HANDLE BASE-LOW	HIPP, SNOW-WHITE	4	
11-2	DA71-00078A	REINF-HANDLE LOW	SBHG1, TI.4	1	
12	DA97-02143A		ABS , SNOW-WHITE	1	
12-1	DA97-02143A DA64-01021A			1	
12-1			ABS , SNOW-WHITE	1	CKI DAD
	DA64-01024A	TRIM-HANDLE CONNECT,MID	SILVER COLOR	2	SKI-BAR
13	DA64-01016A		HIPP , SNOW-WHITE	1	
14	DA64-01020A		ABS, SNOW-WHITE	1	
15	DA64-01022A	HANDLE TRIM-LOW	ABS , SNOW-WHITE	1	
16	DA71-00077A	REINF-HANDLE-MID	SBHG1 , T1.4	1	
17	6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWR	3	
18	6002-000470	SCREW-TAPPING	TH,+,1,M4,L10,ZPC,SCRCH18A	3	
19	DA97-00727D	ASSY HANDLE BAR		1	
19-1	DA64-00575F	HANDLE BAR	A6063(AL),®™24X1587	1	
19-2	DA63-00789A	GROMNMET FIXER HANDLE	POM	2	
19-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
20	DA67-00773B	CAP HANDLE	NOBEL STS MAT	1	
21	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR
22	DA61-00264B	SUPPORT HANDLE MID	NOBEL STS MAT	2	
23	DA67-00796B	CAP HANDLE LOW	NOBEL STS MAT	1	
24	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
25	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
26	6002-001335	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	
19	DA97-00727E	ASSY HANDLE BAR	LONG-BAR	1	
19-1	DA64-00575H	HANDLE BAR	A6063(AL),®™24X1587, SENDING	1	
19-2	DA63-00789A	GROMNMET FIXER HANDLE	POM	2	
19-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
20	DA67-00773D	CAP HANDLE	SC-01645S,VIC SILVER(2coating)	1	
21	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR,
22	DA61-00264D	SUPPORTT HANDLE MID	ABS,SC-01645S,VICTORY-SILVER(2COATING)	2	SENDING
23	DA67-00796D	CAP HANDLE LOW	ABS,SC-01645S,VICTORY-SILVER(2COATING)	1	
24	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
25	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
26	6002-000408	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	

12-7) Freezer Room Door Exploded View (RS21D, RS21F, RS21J, RS23K, RS23D, RS23F, RS23J, RS23K)

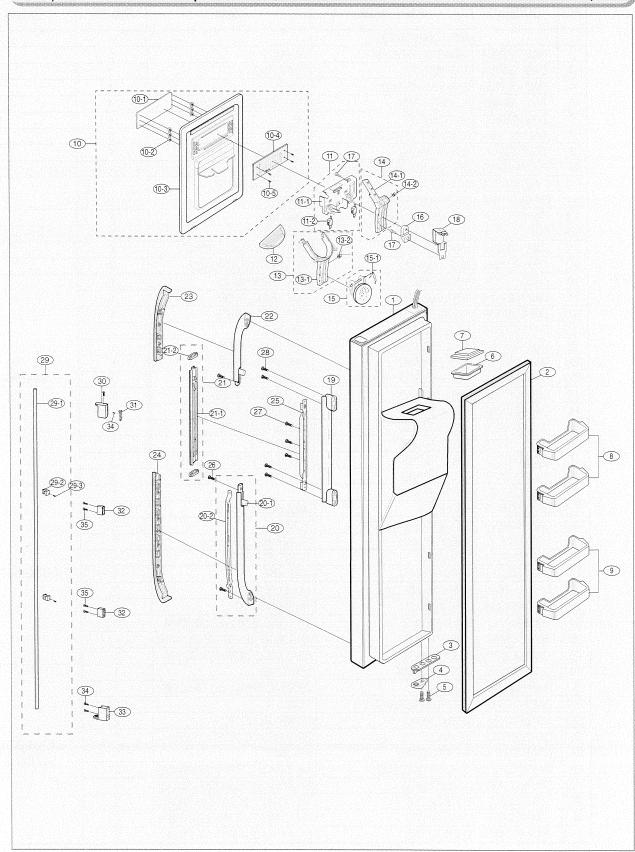


### ■ Part List of Freezer Room Door Exploded View

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	-	ASSY DOOR FOAM FRE	SNOW WHITE	1 1	
2	DA97-01800A	GASKET DOOR-FRE ASSY	SF-PVC	1	
3	DA61-00776A	STOPPER DOOR	SHP1,T3.0	1	
4	DA66-90112C	CAM HINGE-RISER,LOW	NY-66(2110R)	1	
5	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),	4	
6	DA67-00163B	CAP-CHUTE,ICE	ABS, SNOW-WHITE	1	
7	DA72-00262A	CUSHION-GUIDE ICE CHUTE	SILICON	1	
8	DA63-01863F	GUARD-FRE,UPP	HI-PP	2	
9	DA63-01864A	GUARD BOTTLE-FRE LOW	HI-PP	2	
10	DA97-02145A	ASSY COVER-DISPENSER	SNOW-WHIT	1 1	
10-1	DA63-01608A	COVER DISPENSER	ABS, SNOW-WHITE	1	
10-2	DA61-01819A	SUPPORT-KNOB TOUCH,DISP	SILICON	2	
10-3	DA63-02190A	COVER-CONTROL DISP	ABS, SNOW-WHITE	1 1	
10-4	DA41-00173B	PBA PANEL	10mm	1	
10-5	6002-000466	SCREW-TAPPING	PH,2S,M3.O,L8,ZPC(YEL)	4	
11	DA97-01346A	ASSY COVER-PCB, PANEL REAR	REAR ,SNOW	1	
11-1	DA63-01609A	COVER-PCB PANEL, REAR	PP,SNOW WHITE	1	
11-2	DA34-00011A	SWITCH-MICRO	VP533A-OF-5,MICRO,250V,15A,	2	
12	DA66-00037G	TRAY DISPENSER	HIPS,SNOW-WHITE	1 1	
13	DA97-01350A	ASSY LEVER-DISPENSER.ICE	SNOW-WHITE	1 1	
13-1	DA66-00236A	LEVER-DISPENSER,ICE	ABS , SNOW-WHITE	1 1	
13-2		SPRING ETC-DISPENSER ICE-LEVER		1 1	
14	DA97-01352A	ASSY LEVER-DISPENSER, WATER	SNOW-WHITE	1 1	
14-1	DA66-00237A	LEVER-DISPENSER WATER	ABS , SNOW-WHITE	1 1	
14-2	DA61-00338A	SPRING ETC-WATER LEVER, DISP	STS304	1 1	
15	DA97-00283A	ASSY COVER-ICE ROUTE	SNOW-WHITE	1 1	
15-1	DA71-00073A	STOPPER-LEVER DISPENSER	POM	1	
16	DA61-70234A	SUPPORT-TIME DELAY	HIPS	1	
17	6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,STS304,	1 1	
18	DA74-40154C	VALVE SOLENOID	USD-DPS4	1	
19	DA64-01017A	HANDLE BASE-MID	HIPP , SNOW-WHITE	1 1	
20	DA97-02141A	HANDLE-LOW-ASSY	ABS , SNOW-WHITE	1	
20-1	DA64-01018A	HANDLE BASE-LOW	HIPP, SNOW-WHITE	1	
20-2	DA71-00078A	REINF-HANDLE LOW	SBHG1, TI.4	1	
21	DA97-02143A	HANDLE TRIM-ASSY,MID	ABS , SNOW-WHITE	1 1	
21-1	DA64-01021A	HANDLE TRIM-MID	ABS , SNOW-WHITE	1 1	
21-2	DA64-01024A	TRIM-HANDLE CONNECT,MID	SILVER COLOR	2	
22	DA64-01016A	HANDLE BASE-UPP	HIPP , SNOW-WHITE	1 1	
23	DA64-01020A	HANDLE-TRIM UPP	ABS , SNOW-WHITE	1 1	
24		HANDLE TRIM-LOW	ABS , SNOW-WHITE		
25		REINF-HANDLE-MID	SBHG1, T1.4	1 1	
26	6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWR	3	
27	6002-000213	SCREW-TAPPING			
28	6002-000470	SCREW-TAPPING	TH,+,1,M4,L10,ZPC,SCRCH18A PH,+,2S,M5.0,L18,ZPC(YEL)	3	
29	DA97-00727D	ASSY HANDLE BAR	1 11,+,20,1VIO.U,L10,ZPU(YEL)	4	
29-1	DA97-00727D	HANDLE BAR	ACOCO(AL) @TMOAV4F07	1	
29-1	DA63-00789A		A6063(AL),®™24X1587	1	
29-3		GROMNMET FIXER HANDLE	POM MOUDO TUAO	2	LONG-BAR
30	6002-000216 DA67-00773B	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
JU	DA67-00773B DA61-00831A	CAP HANDLE BASE CAP HANDLE	NOBEL STS MAT	1	

#### ■ Part List of Freezer Room

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
32	DA61-00264B	SUPPORT HANDLE MID	NOBEL STS MAT	2	
33	DA67-00796B	CAP HANDLE LOW	NOBEL STS MAT	1	
34	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	LONG DAD
35	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	LONG-BAR
36	6002-001335	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	
29	DA97-00727E	ASSY HANDLE BAR	LONG-BAR	1	
29-1	DA64-00575H	HANDLE BAR	A6063(AL),®™24X1587, SENDING	1	
29-2	DA63-00789A	GROMNMET FIXER HANDLE	POM	2	
29-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
30	DA67-00773D	CAP HANDLE	SC-01645S,VIC SILVER(2coating)	1	
31	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR,
32	DA61-00264D	SUPPORTT HANDLE MID	ABS,SC-01645S,VICTORY-SILVER(2COATING)	2	SENDING
33	DA67-00796D	CAP HANDLE LOW	ABS,SC-01645S,VICTORY-SILVER(2COATING)	1	
34	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
35	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
36	6002-001335	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	


### 12-8) Refrigerator Room Door Exploded View

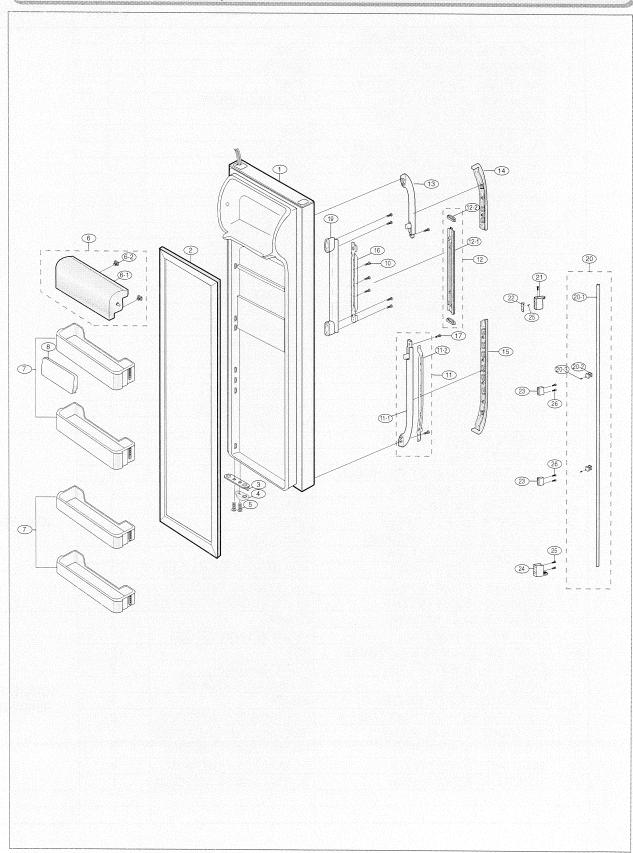

#### ■ Part List of Refrigerator Room Door Exploded View

NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	-	ASSY DOOR FOAM REF	-	1	
2	DA63-30232K	GASKET DOOR-REF ASSY	SF-PVC	1	
3	DA61-00776A	STOPPER DOOR	SHP1, T3.0	1	
4	DA66-90112C	CAM HINGE-RISER,LOW	NY-66	1	
5	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
6	DA97-00904A	ASSY COVER-GUARD		1	
6-1	DA63-00199B	COVER-GUARD	GPPS	1	
6-2	DA73-00216A	RUBBER-COVER GUARD	SILICONE	2	
7	DA63-00635E	GUARD BOTTLE-REF,UPP	HIPP	2	
8	DA71-00090A	GUIDE-BOTTLE REF	PP	1	
9	DA63-00590E	GUARD REF-LOW	HIPP	2	
10	6002-000470	SCREW-TAPPING	TH,+,1,M4,L10	3	
11	DA97-02141A	HANDLE-LOW-ASSY	ABS , SNOW-WHITE	1 1	
11-1	DA64-01018A	HANDLE BASE-LOW	HIPP, SNOW-WHITE	1	
11-2	DA71-00078A	REINF-HANDLE LOW	SBHG1, TI.4	1	
12	DA97-02143A	HANDLE TRIM-ASSY,MID	ABS, SNOW-WHITE	1	
12-1	DA64-01021A	HANDLE TRIM-MID	ABS, SNOW-WHITE	1	
12-2	DA64-01024A	TRIM-HANDLE CONNECT,MID	SILVER COLOR	2	
13	DA64-01016A	HANDLE BASE-UPP	HIPP, SNOW-WHITE	1	
14	DA64-01020A	HANDLE-TRIM UPP	ABS , SNOW-WHITE	1	
15	DA64-01022A	HANDLE TRIM-LOW	ABS, SNOW-WHITE	1	
16	DA71-00077A	REINF-HANDLE-MID	SBHG1, T1.4	1	
17	6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL)	3	
18	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
19	DA64-01017A	HANDLE BASE-MID	HIPP, SNOW-WHITE	1	
20	DA97-00727D	ASSY HANDLE BAR		1	
20-1	DA64-00575F	HANDLE BAR	A6063(AL),®™24X1587	1	
20-2	DA63-00789A	GROMNMET FIXER HANDLE	POM	2	1
20-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
21	DA67-00773B	CAP HANDLE	NOBEL STS MAT	1	
22	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR
23	DA61-00264B	SUPPORT HANDLE MID	NOBEL STS MAT	2	
24	DA67-00796B	CAP HANDLE LOW	NOBEL STS MAT	1	
25	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
26	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
27	6002-001335	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	
20	DA97-00727E	ASSY HANDLE BAR	LONG-BAR	1 1	
20-1	DA64-00575H	HANDLE BAR	A6063(AL),®™24X1587, SENDING	1	
20-2	DA63-00789A	GROMNMET FIXER HANDLE	POM	2	
20-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
21	DA67-00773D	CAP HANDLE	SC-01645S, VIC SILVER(2coating)	1	
22	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR
23	DA61-00264D	SUPPORTT HANDLE MID	ABS,SC-01645S,VICTORY-SILVER(2COATING)	2	SENDING
24	DA67-00796D	CAP HANDLE LOW	ABS,SC-01645S,VICTORY-SILVER(2COATING)	1	
25	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
26	6002-000213	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
27	6002-000400	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	

#### 12-9) Refrigerator Room Door Exploded View (RS21H, RS21F, RS21K, RS23H, RS23F, RS23K)

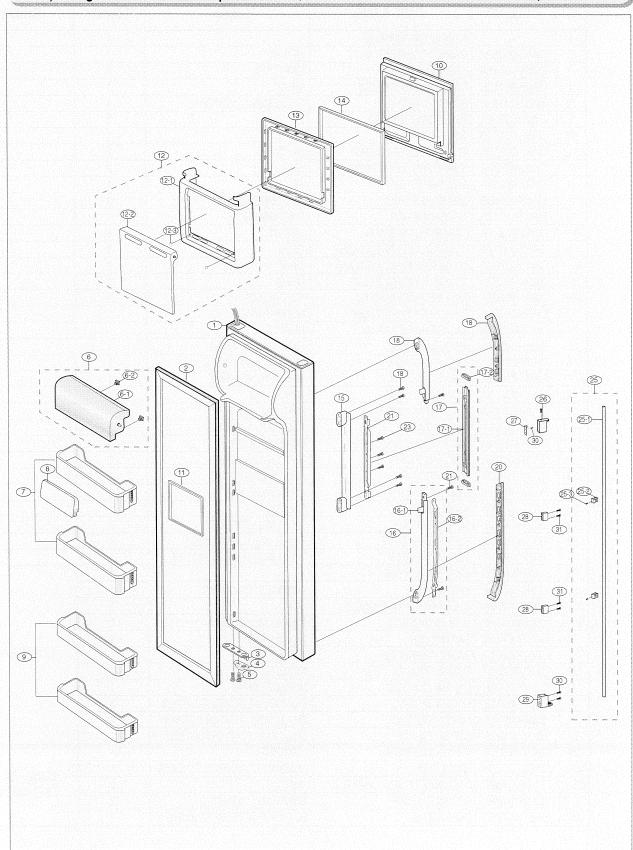

#### ■ Part List of Refrigerator Room Door Exploded View


NO	CODE-NO	PART NAME	Spec	Quantity	Remark
1	-	ASSY DOOR FOAM REF	2	1	
2	DA63-30232K	GASKET DOOR-REF ASSY	SF-PVC	1	
3	DA61-00776A	STOPPER DOOR	SHP1, T3.0	1	
4	DA66-90112C	CAM HINGE-RISER,LOW	NY-66	1	
5	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
6	DA97-00904A	ASSY COVER-GUARD		1	
6-1	DA63-00199B	COVER-GUARD	GPPS	1	
6-2	DA73-00216A	RUBBER-COVER GUARD	SILICONE	2	
7	DA63-00635E	GUARD BOTTLE-REF.UPP	HIPP	2	
8	DA71-00090A	GUIDE-BOTTLE REF	PP	1	
9	DA63-00590E	GUARD REF-LOW	HIPP, SNOW-WHITE	2	
10	DA97-01347A	ASSY HOME BAR	SNOW-WHITE	1	
11	DA63-00224A	GASKET-HOME BAR IN	SF-PVC	1	
12	DA63-00877A	COVER DOOR-RECESS,ASSY	GPPS	1 1	
12-1	DA63-00222A	COVER-DOOR RECESS-OUT	GPPS	1	
12-2	DA63-00223A	COVER-DOOR RECESS-IN	GPPS	1	
12-3	DA63-40167A	GROMMET-COVER CHIL	T3.0, SILICON	2	
13	DA63-01607A	COVER-BRACKET FRAME	SNOW-WHITE	1	
14	DA63-00225A	GASKET-HOME BAR-OUT	SF-PVC	1	
15		HANDLE BASE-MID	HIPP, SNOW-WHITE	1	
16	DA97-02141A	HANDLE-LOW-ASSY	ABS , SNOW-WHITE	1	
16-1	DA64-01018A	HANDLE BASE-LOW	HIPP, SNOW-WHITE	1	
16-2	DA71-00078A	REINF-HANDLE LOW	SBHG1, TI.4	1	
17	DA97-02143A	HANDLE TRIM-ASSY,MID	ABS , SNOW-WHITE	1	
17-1	DA64-01021A	HANDLE TRIM-MID	ABS , SNOW-WHITE	1	
17-2	DA64-01024A	TRIM-HANDLE CONNECT,MID	SILVER COLOR	2	
18	DA64-01016A	HANDLE BASE-UPP	HIPP, SNOW-WHITE	1	
19	DA64-01020A	HANDLE-TRIM UPP	ABS, SNOW-WHITE	1	
20	DA64-01022A	HANDLE TRIM-LOW	ABS, SNOW-WHITE	1	
21	DA71-00077A	REINF-HANDLE-MID	SBHG1, T1.4	1 1	
22	6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL)	3	
23	6002-000468	SCREW-TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL)	4	
24	6002-000400	SCREW-TAPPING	TH,+,1,M4,L10,ZPC,SCRCH18A	3	
25	DA97-00727D	ASSY HANDLE BAR	111,T,1,1VIT,L10,Z1 0,001 101 110A	1	
25-1	DA64-00575F	HANDLE BAR	A6063(AL),®™24X1587	1	
25-2	DA63-00789A	GROMNMET FIXER HANDLE	POM 24X1367	2	
25-3	6002-000216	SCREW TAPPING	MSWR1,M2,L20,TH,1S	2	
26	DA67-00773B	CAP HANDLE	NOBEL STS MAT	1	LONG-BAR
27	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	
28	DA61-00264B	SUPPORT HANDLE MID	NOBEL STS MAT	2	LONG DAIT
29	DA67-00204B	CAP HANDLE LOW	NOBEL STS MAT	1	
30	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
31	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
32	6002-000406	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	- 4	
25	DA97-00727E	ASSY HANDLE BAR		1	
<u>25</u> 25-1			LONG-BAR	1	LONG-BAR, SENDING
	DA64-00575H	HANDLE BAR	A6063(AL),® TM 24X1587, SENDING	1	
25-2	DA63-00789A	GROMNMET FIXER HANDLE	POM MOMPH MOLIOCITALIS	2	
25-3 26	6002-000216 DA67-00773D	SCREW TAPPING  CAP HANDLE	MSWR1,M2,L20,TH,1S SC-01645S,VIC SILVER(2coating)	2	

#### ■ Part List of Refrigerator Room Door Exploded View


10	CODE-NO	PART NAME	Spec	Quantity	Remark
27	DA61-00831A	BASE CAP HANDLE	ABS, NTR	1	LONG-BAR, SENDING
28	DA61-00264D	SUPPORTT HANDLE MID	ABS,SC-01645S,VICTORY-SILVER(2COATING)	2	
9	DA67-00796D	CAP HANDLE LOW	ABS,SC-01645S,VICTORY-SILVER(2COATING)	1	
30	6002-000213	SCREW TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	3	
31	6002-000468	SCREW TAPPING	PH,+,2S,M5.0,L18,ZPC(YEL),MAWR	4	
32	6002-001335	SCREW TAPPING	BH,+,1,M4,L12,DAC(WHT),SWRCH18A	1	

## 13. Machine Room Assembly Specification

### 13-1) Please remove fixed screw of cover of machine room of Refrigerator rear low part.

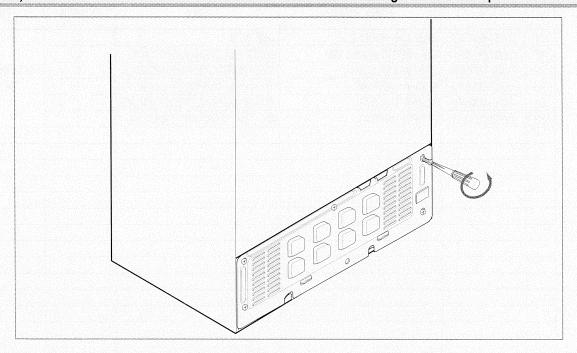


### 13-2) Machine Room Assembly Specification

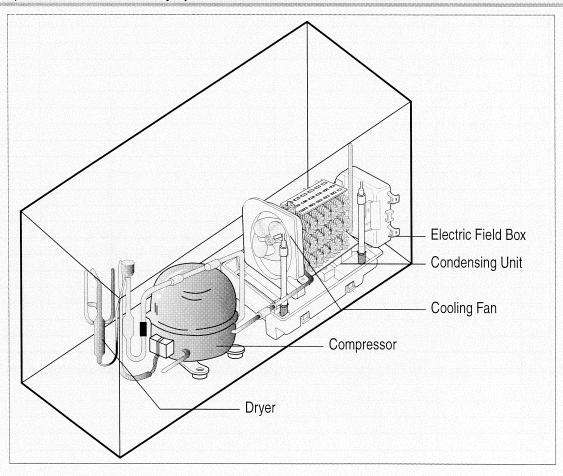


## 14. Disassembly & Assembly Method of Internal Part of Electric Field Box

#### 14-1) Please cut-off the power supply of refrigerator.

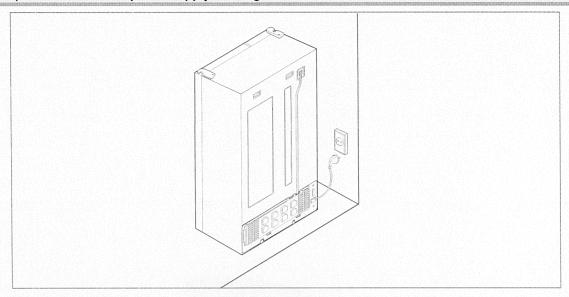

#### 14-2) Please deviate cover of electric field box using driver.

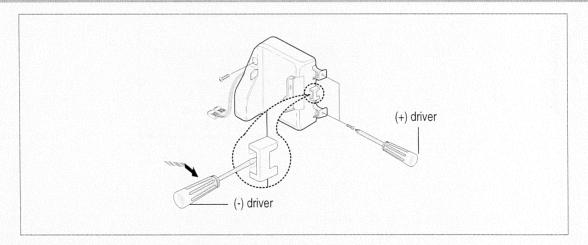

#### 14-3) Assembly Specification of Electric Field Box

